



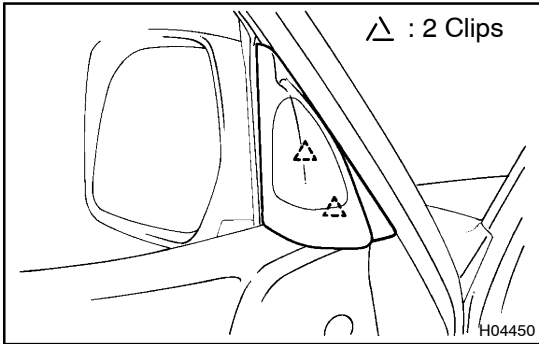

DISASSEMBLY

1. REMOVE LOWER FRAME BRACKET


Using a screwdriver, remove the lower frame bracket garnish.

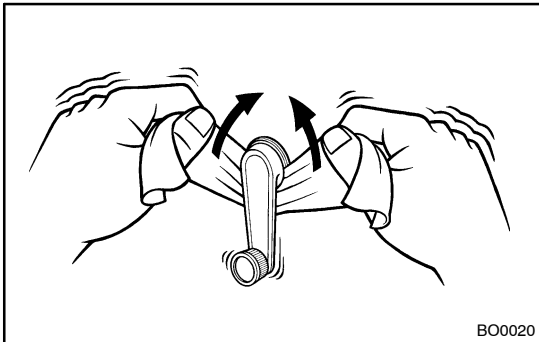

2. w/o Power Window:


REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and plate.

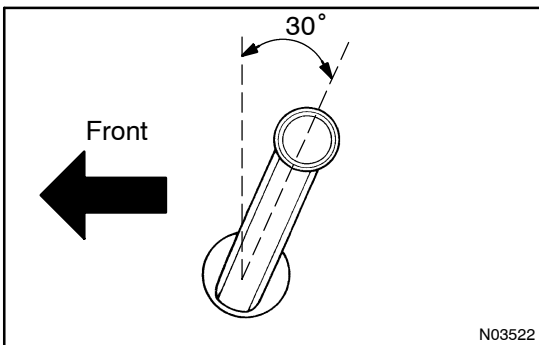

HINT:

At the time of assembly, please refer to the following item.
With door window fully closed, install the plate and regulator handle with the snap ring shown in the illustration.

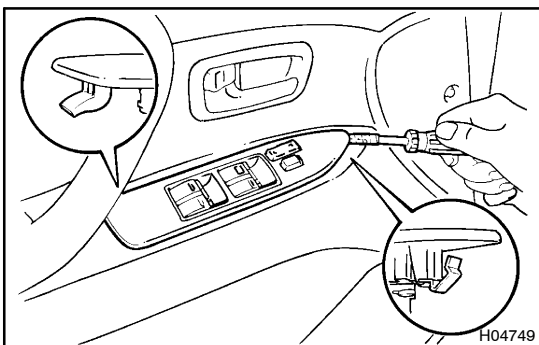


3. w/ Power Window:

REMOVE REGULATOR HANDLE

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

- Tape the screwdriver tip before use.
- (b) Disconnect the connector.

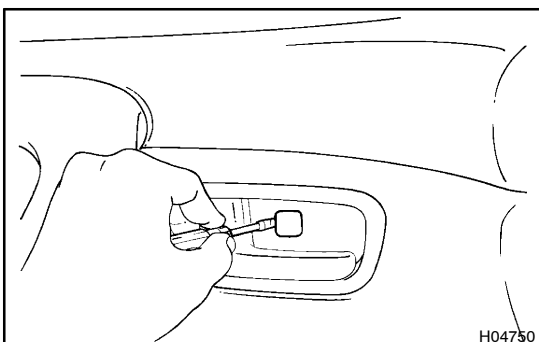


4. REMOVE DOOR INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the cover as shown in the illustration.

HINT:


Tape the screwdriver tip before use.

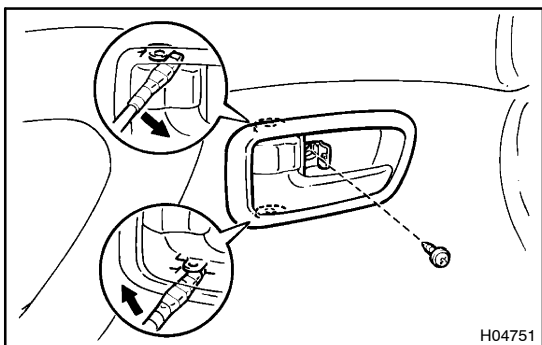

- (b) Remove the screw.
- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

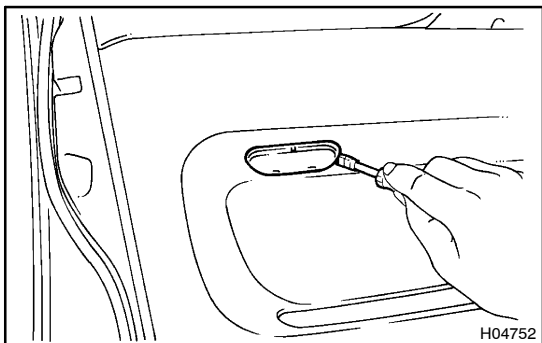


5. w/ Courtesy Light:

REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

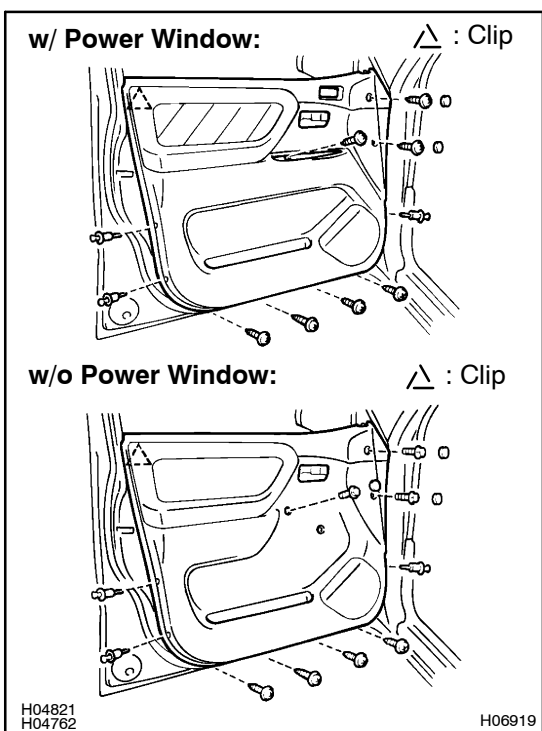

6. REMOVE DOOR TRIM

- (a) w/ Power Window:
Remove the 2 caps and 7 screws.
- (b) w/o Power Window:
Remove the 3 caps and 7 screws.
- (c) Remove the 3 clips.
- (d) Insert a screwdriver between the door and door trim to pry the trim out.


NOTICE:

Be careful not to damage the door and door trim.

HINT:

Tape the screwdriver tip before use.

- (e) Pull the trim upward to remove it.

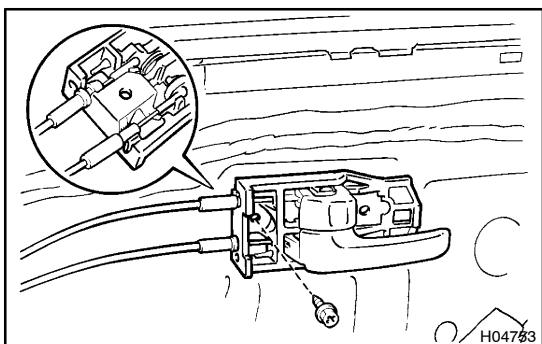

7. REMOVE INSIDE HANDLE

- (a) Remove the screw.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

8. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

NOTICE:


Do not tear the cover.

HINT:

At the time of assembly, please refer to the following item.
Bring out the 2 control cables through the service hole cover.

9. REMOVE OUTER REAR VIEW MIRROR

- (a) w/ Power Remote Control Mirror:
Disconnect the connector.
- (b) Remove the 3 bolts and mirror.

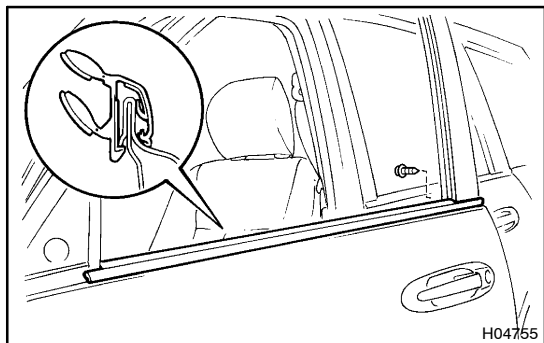**10. REMOVE DOOR BELT MOULDING**



- (a) Remove the screw.
- (b) Using a scraper, remove the door belt moulding.

HINT:



Tape the screwdriver tip before use.

11. REMOVE THESE PARTS:

- (a) Door glass
- (b) w/ Speaker:
Speaker
- (c) w/o Speaker:
Speaker Hole Cover
- (d) Door glass run
- (e) Lower frame

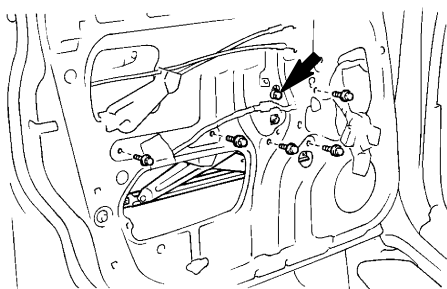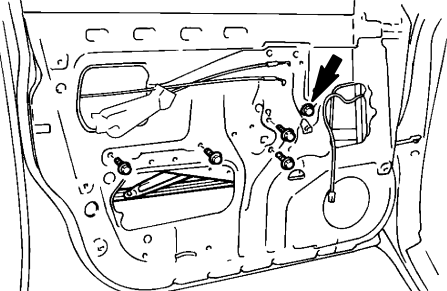w/ Power Window:**w/o Power Window:****12. REMOVE WINDOW REGULATOR**

- (a) w/ Power Window:
Disconnect the connector, then remove the 5 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (b) w/o Power Window:
Remove the 4 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (c) Loosen the bolt and window regulator.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

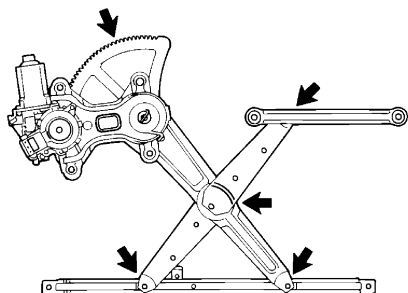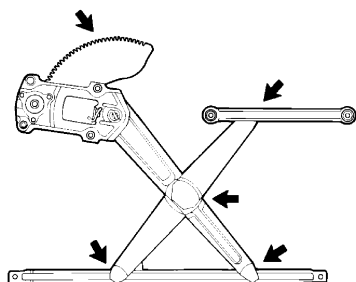w/ Power Window:**w/o Power Window:**H04758
H04764

H06921

HINT:

Remove the regulator through the service hole.

HINT:



At the time of assembly, please refer to the following item.

Apply MP grease to the window regulator.

NOTICE:

At the time of assembly, please refer to the following item.

Do not apply grease to the spring of the window regulator.

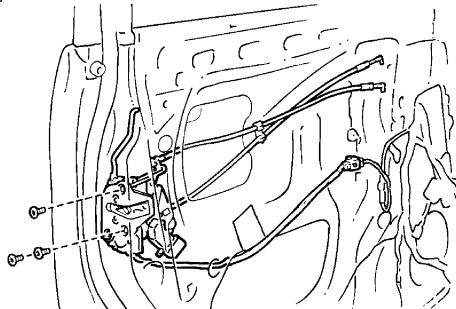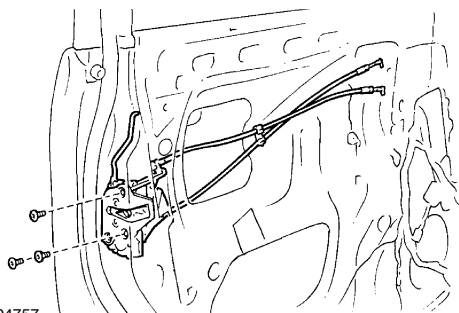w/ Power Door Lock:**w/o Power Door Lock:**H04757
H05717

H06922

13. REMOVE DOOR LOCK

(a) Remove the clip and door lock link protector.

(b) w/ Power Door Lock:

Disconnect the connector.

(c) Disconnect the 2 links from outside handle and door lock cylinder.

(d) Using a torx wrench, remove the 3 screws and door lock.

Torx wrench: T30 (Part No.09042-00010 or locally manufactured tool)

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

HINT:



Remove the door lock through the service hole.

HINT:

At the time of assembly, please refer to the following items.

- Apply adhesive to 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent

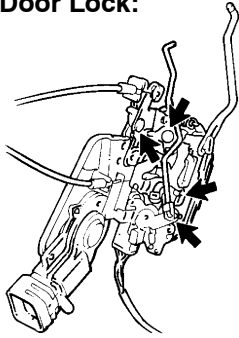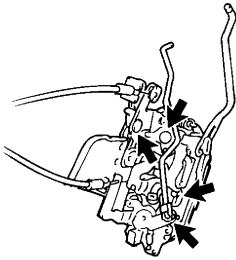w/ Power Door Lock:**w/o Power Door Lock:**H04759
H05718

H06923

- Apply MP grease to the sliding and rotating parts of the door lock.
- 14. REMOVE OUTSIDE HANDLE WITH DOOR LOCK CYLINDER**
- (a) Remove the 2 bolts and outside handle with door lock cylinder.
 - (b) Remove the bolt and door lock cylinder from the outside handle.