


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


- Remove the front door scuff plate.
- Remove the rear door scuff plate.
- Remove the front door opening trim.
- Remove the rear door opening trim.
- Remove the center pillar lower garnish.

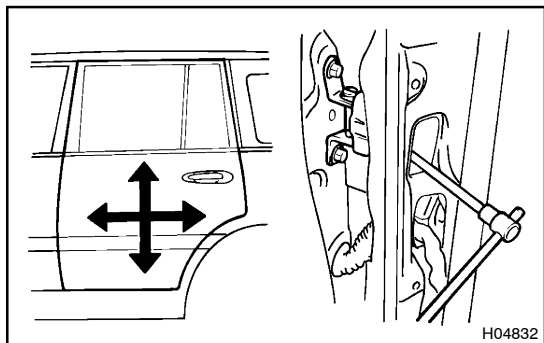

- Loosen the body side hinge nuts to adjust.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)


- Install the removed parts.

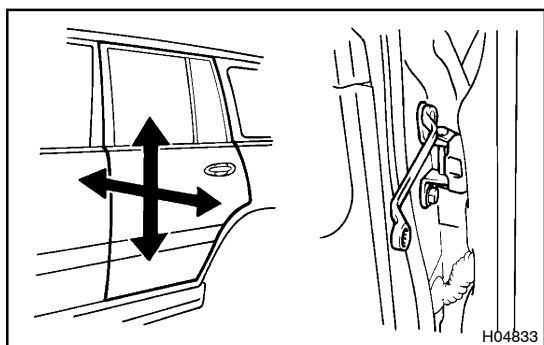

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

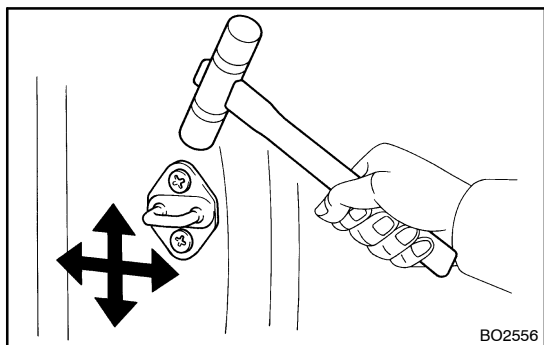

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
 - Loosen the striker mounting screws to adjust.
- Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)**
- Using a plastic hammer, tap the striker to adjust it.