

## REMOVAL

### 1. REMOVE SEAT TRACK OUTER COVER

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape the screwdriver tip before use.

### 2. REMOVE OUTER FRONT SEAT CENTER BELT

Remove the bolt from the body, and pull out the belt from the hole which penetrates the seat cushion.

### 3. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors, then remove the front seat.

**NOTICE:**

**Be careful not to damage the body.**