

INSTALLATION

1. INSTALL FRONT SEAT

- (a) Slide the front seat to the most front position.

NOTICE:

Make sure that seat adjuster locks.

- (b) Without holding the seat track adjuster handle, mount the seat to the vehicle.

HINT:

If holding the seat track adjuster handle, the adjusted most front position slip off.

- (c) Connect the connector.
- (d) Tighten the bolts on the rear side temporarily, tighten them completely starting from the bolts on the inner side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (e) Slide the seat to the most rear position to install the bolts on the front side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

2. INSTALL OUTER FRONT SEAT CENTER BELT

Slide the seat to the front most position to install the outer front seat center belt with bolt to the body.

3. INSTALL SEAT TRACK OUTER COVER