


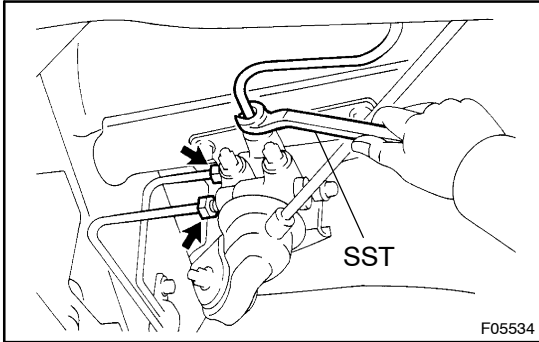


REMOVAL

1. DISCONNECT BRAKE LINES

Using SST, disconnect the 3 brake lines from the valve body.
SST 09751-36011

2. REMOVE LSP & BV ASSEMBLY

- (a) Remove the nut and disconnect the shackle No. 2 from the bracket.
- (b) Remove the retainer, 2 cushions and collar.
- (c) Remove the 2 mounting bolts and shackle bracket.

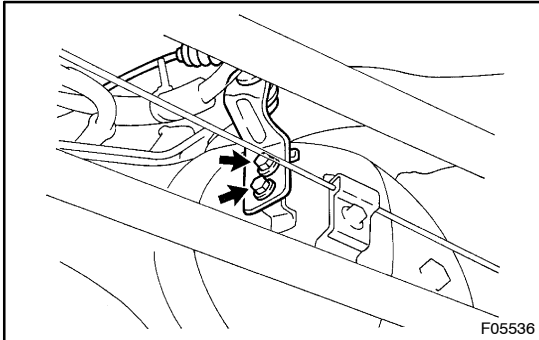

- (d) RFS:
Remove the 4 mounting bolts and valve bracket, then remove the LSP & BV assembly.
- (e) IFS:
Remove the 3 mounting bolts and valve bracket, then remove the LSP & BV assembly.

