

INSTALLATION

Installation is in the reverse order of removal ([See page CL-17](#)).

HINT:

After installation, bleed the clutch system.