

|     |                        |                              |
|-----|------------------------|------------------------------|
| DTC | C1794 / 94, C1795 / 95 | Vehicle Speed Sensor Circuit |
|-----|------------------------|------------------------------|


CIRCUIT DESCRIPTION

This circuit receiving the speed detected by the speed sensor from the ABS ECU.


| DTC No.                  | DTC Detecting Condition                                         | Trouble Area                                                                                                                                                                  |
|--------------------------|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| C1794 / 94<br>C1795 / 95 | Vehicle speed 12 mph (20 km/h) or higher signal does not input. | <ul style="list-style-type: none"><li>• Right front, left front speed sensor</li><li>• Each speed sensor circuit</li><li>• ABS ECU</li><li>• Suspension control ECU</li></ul> |

WIRING DIAGRAM

LHD

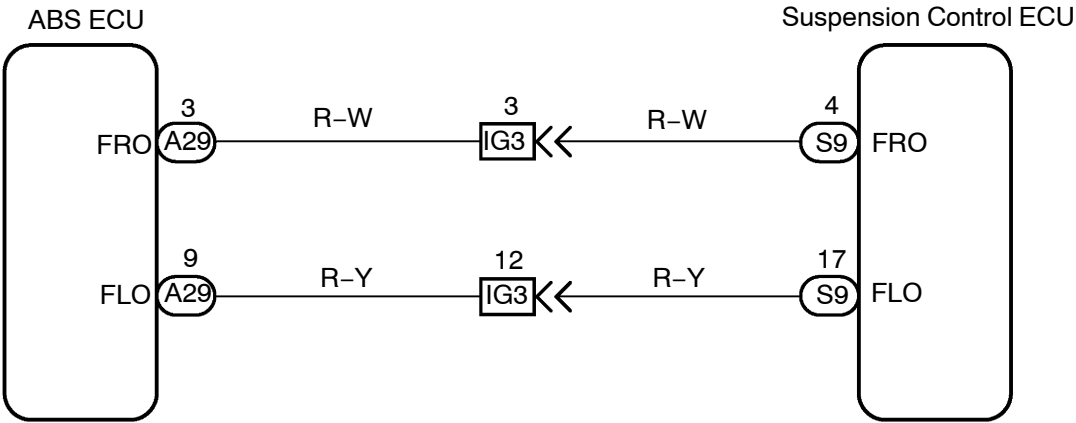

RHD

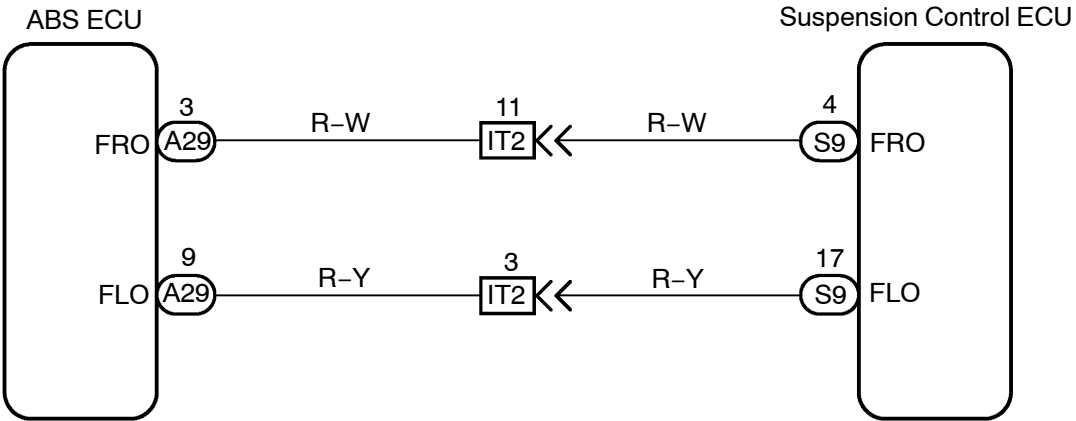

F05332  
F05332

F06211

**INSPECTION PROCEDURE**

- |          |                                                               |
|----------|---------------------------------------------------------------|
| <b>1</b> | <b>Check whether or not the ABS ECU outputs DTC 31 or 32.</b> |
|----------|---------------------------------------------------------------|

Check DTC on [page DI-208](#).

**YES**

**Check ABS speed sensor circuit.**  
([See page DI-325](#))

**NO**

- |          |                                                                                                                                               |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check for open and short circuit in harness and connector between ABS ECU and suspension control ECU (<a href="#">See page IN-35</a>).</b> |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------|

**NG**

**Repair or replace harness or connector.**

**OK**

**Check and replace suspension control ECU.**