


|     |          |                                        |
|-----|----------|----------------------------------------|
| DTC | B2796/99 | No Communication in Immobiliser system |
|-----|----------|----------------------------------------|

CIRCUIT DESCRIPTION

| DTC No.  | DTC Detecting Condition | Trouble Area                                                                                                                                                                 |
|----------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| B2796/99 | No communication        | <ul style="list-style-type: none"><li>• Key</li><li>• Transponder Key Coil</li><li>• Transponder Key Amplifier</li><li>• Wire harness</li><li>• Engine and ECT ECU</li></ul> |

WIRING DIAGRAM

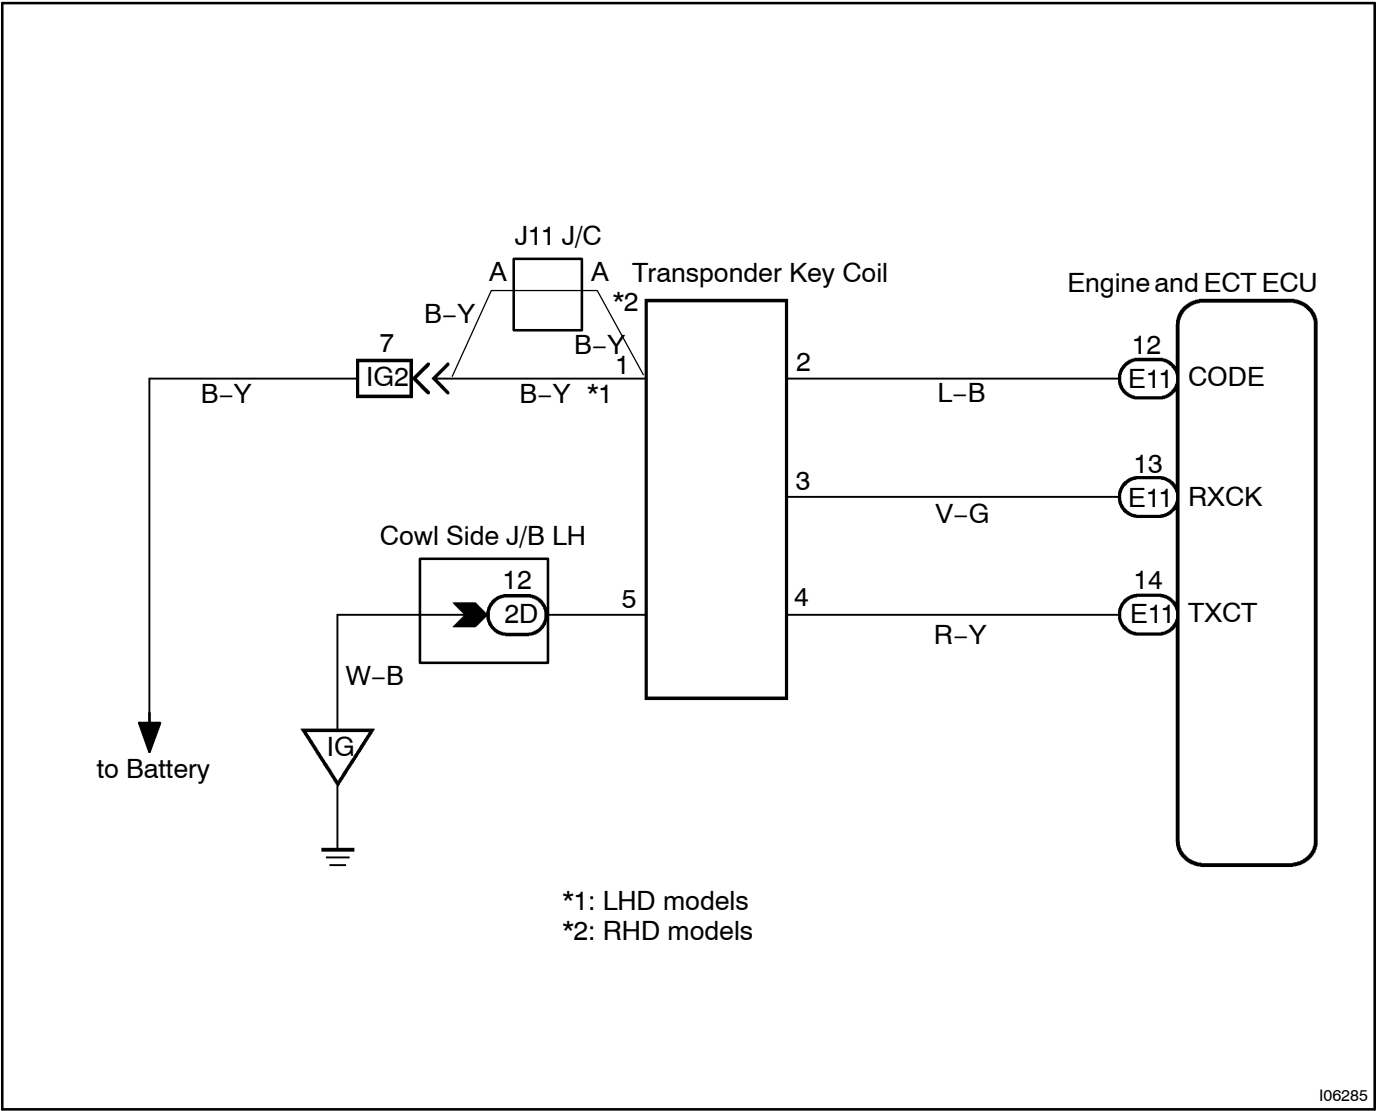

**INSPECTION PROCEDURE**

**1** Check transponder key coil ([See page BE-175](#)).

**NG**

Replace transponder key coil.

**OK**

**2** Check harness and connector between transponder key amplifier and Engine and ECT ECU.

**NG**

Repair or replace harness and connector.

**OK**

**3** Does it operate normally after replacement of transponder key amplifier?

**Yes**

Replace transponder key amplifier.

**No**

Replace Engine and ECT ECU.