


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

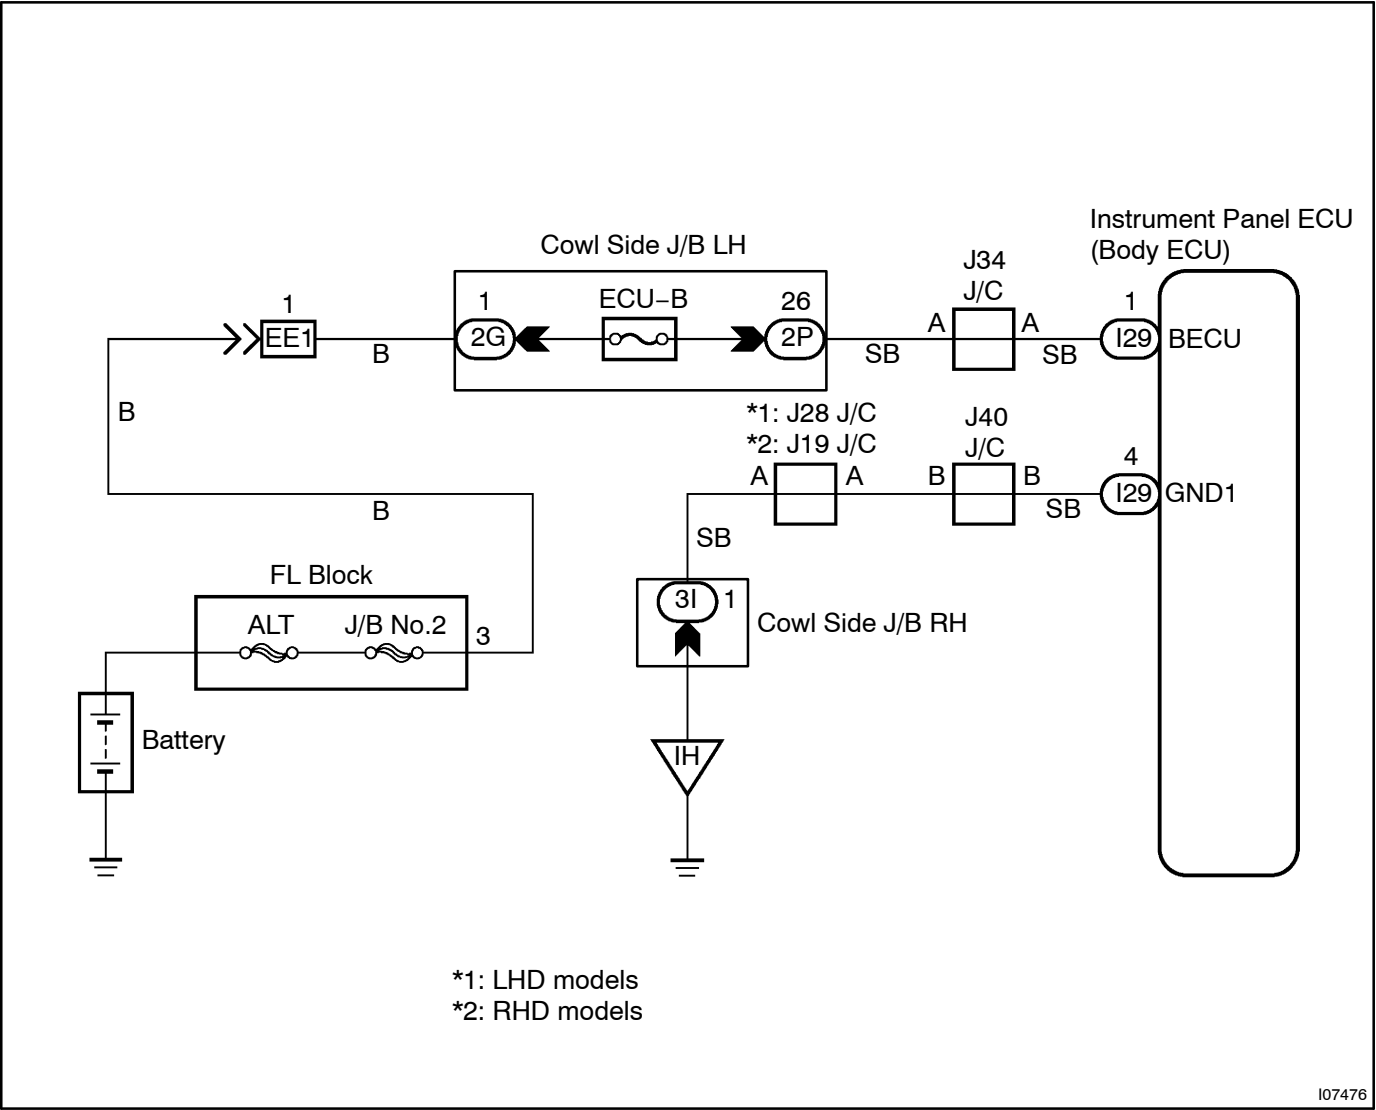

INSPECTION PROCEDURE**1 Check ECU–B fuse.****CHECK:**

Check continuity of ECU–B fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK****2 Check voltage between terminals BECU and GND of Body ECU connector.****PREPARATION:**

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals BECU and GND.

OK:**Voltage: 10 – 14V****OK****Proceed to next circuit inspection shown on problem symptoms table. ([See page DI-773](#))****NG****3 Check wireharness and connector between Body ECU and body ground.****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector between Body ECU and battery.**