

Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

LHD Models:

Cowl Side J/B LH

Instrument Panel ECU

F25 Front Interior Light
R34 Rear Personal Light

R33 Rear Interior Light

F26 Front Personal Light

Rear Courtesy Light LH

DOME Relay

Front Door Courtesy Switch LH

I25 Ignition Key Illumination

J40 J/C

J41 J/C

J30 J/C

Rear RH Door Courtesy Light

Cowl Side J/B RH

to Battery

IF

G-W

W-B

S-B

R

G-Y

G-R

B

E

G-B

G-R

FRM

RLCL


LMRY

KYIL

FRCL

RRCL

109097

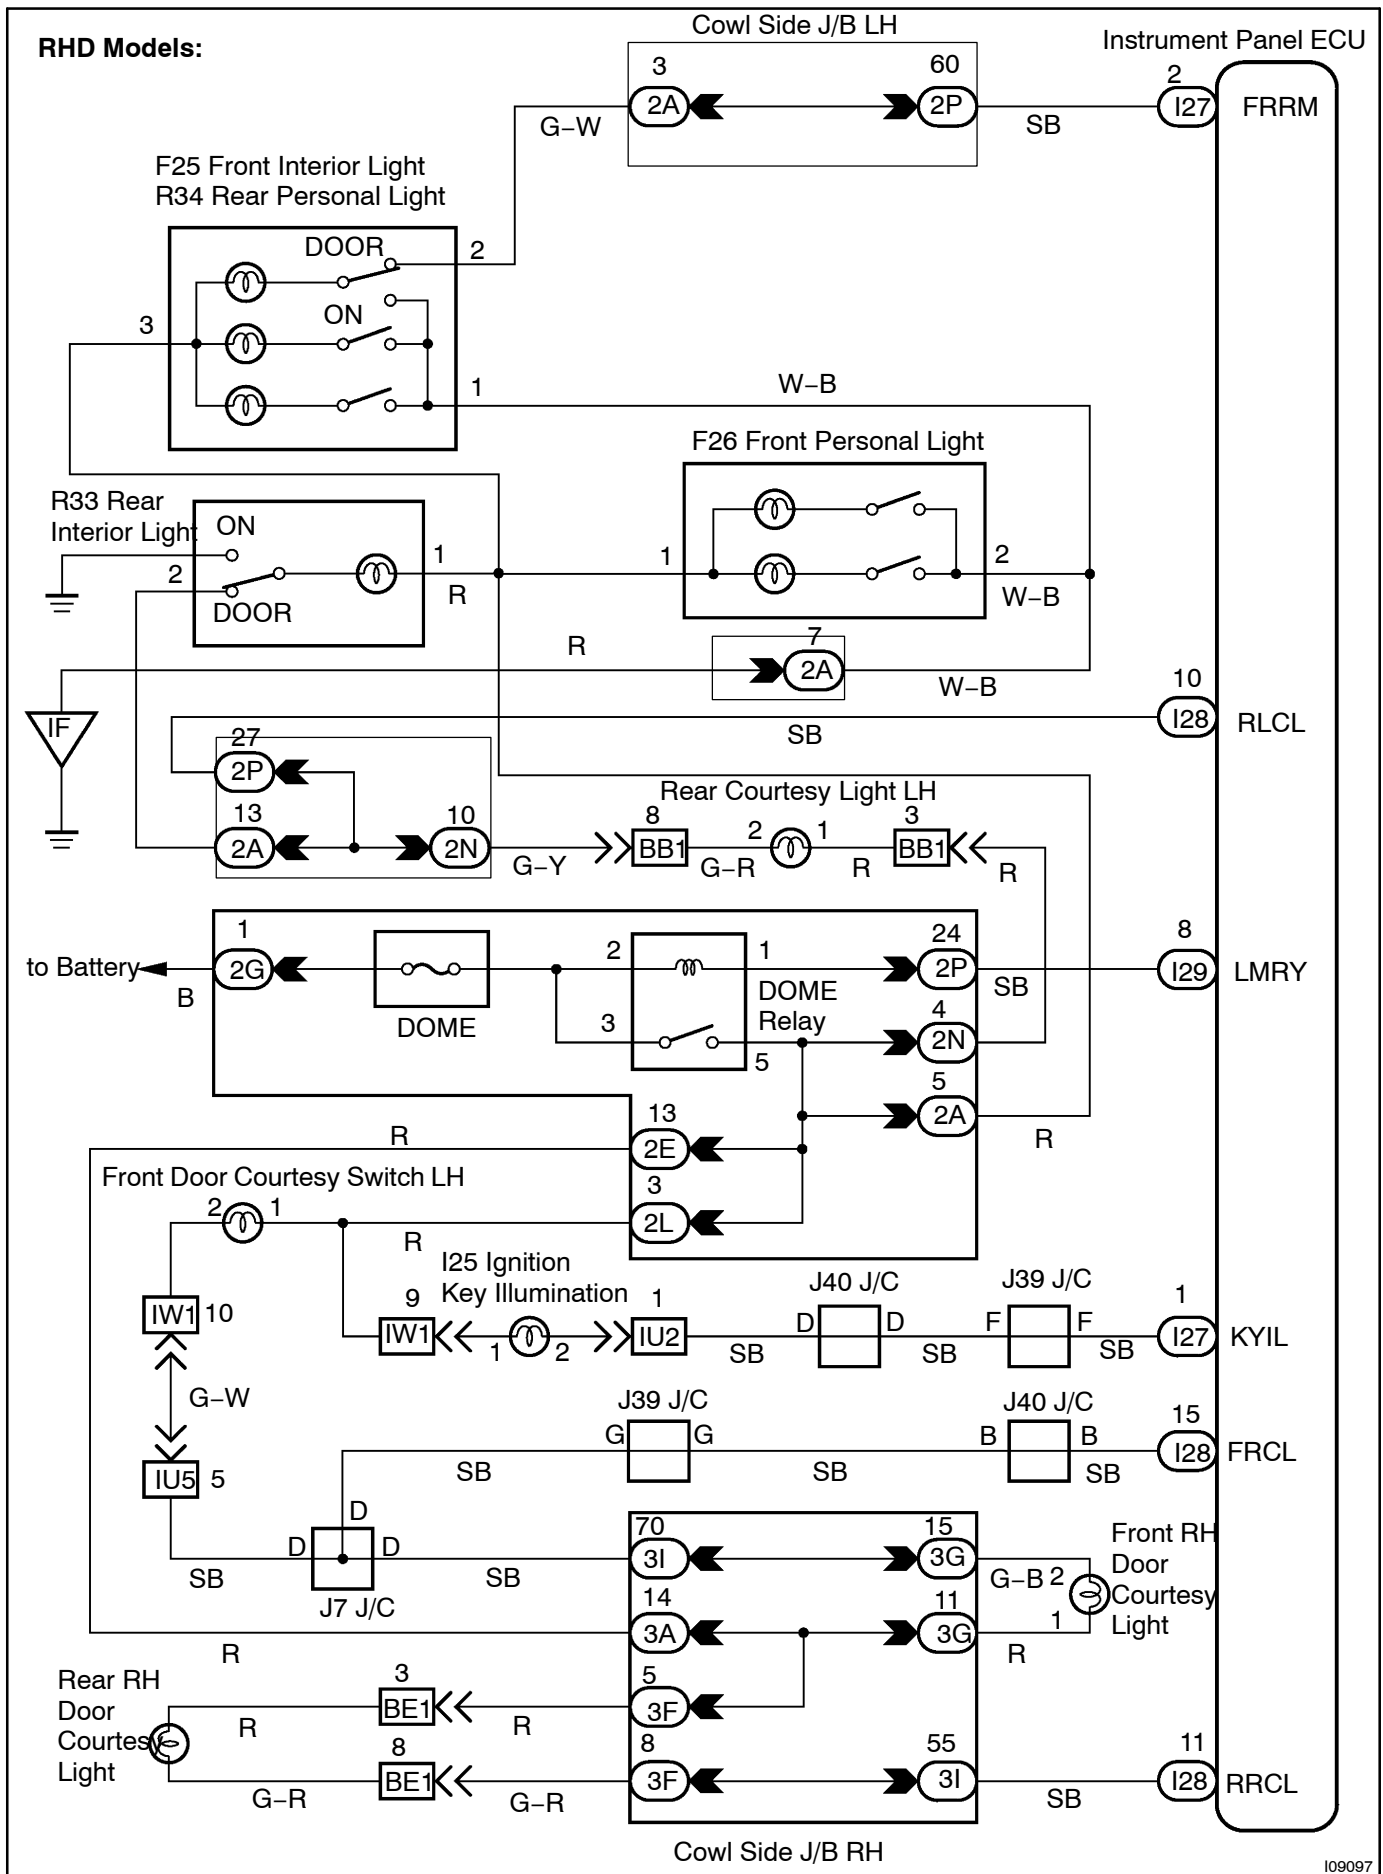

109097

INSPECTION PROCEDURE**1 Check DOME fuse.****NG****Replace the fuse.****OK****2 Check illumination light.****NG****Replace the failure light.****OK****3 Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light .****NG****Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))**