


Light control switch circuit

WIRING DIAGRAM

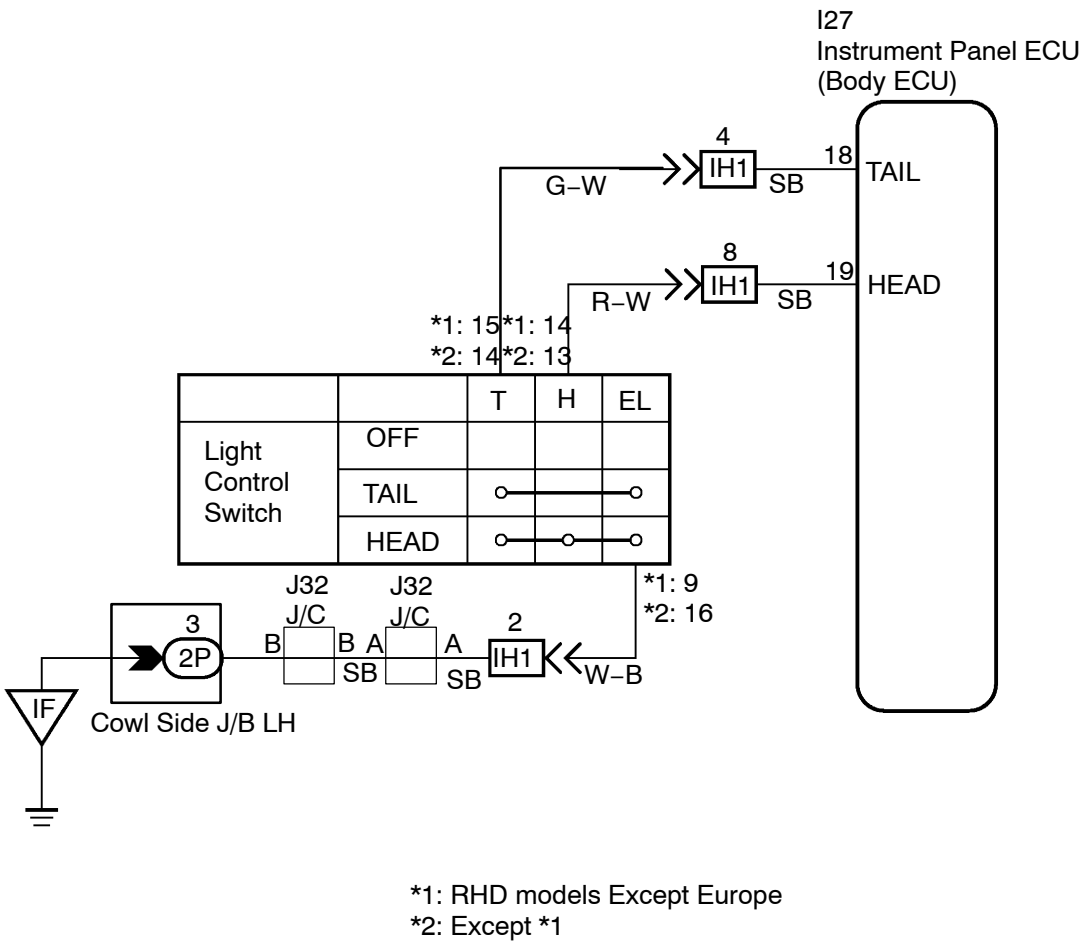

I07481

INSPECTION PROCEDURE

1 Check headlight control switch ([See page BE-26](#)).

NG

Replace the headlight control switch.

OK

2 Check wireharness and connector between headlight control switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-773](#))