

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check power main relay. (See page BE-26) |
|---|--|

NG

Replace the power main relay.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between power main relay and Body ECU, battery and power main relay. |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-773)
--