


Neutral Start Switch Circuit

CIRCUIT DESCRIPTION

The neutral start switch detects the shift lever position P and sends signals to the Body ECU.

WIRING DIAGRAM

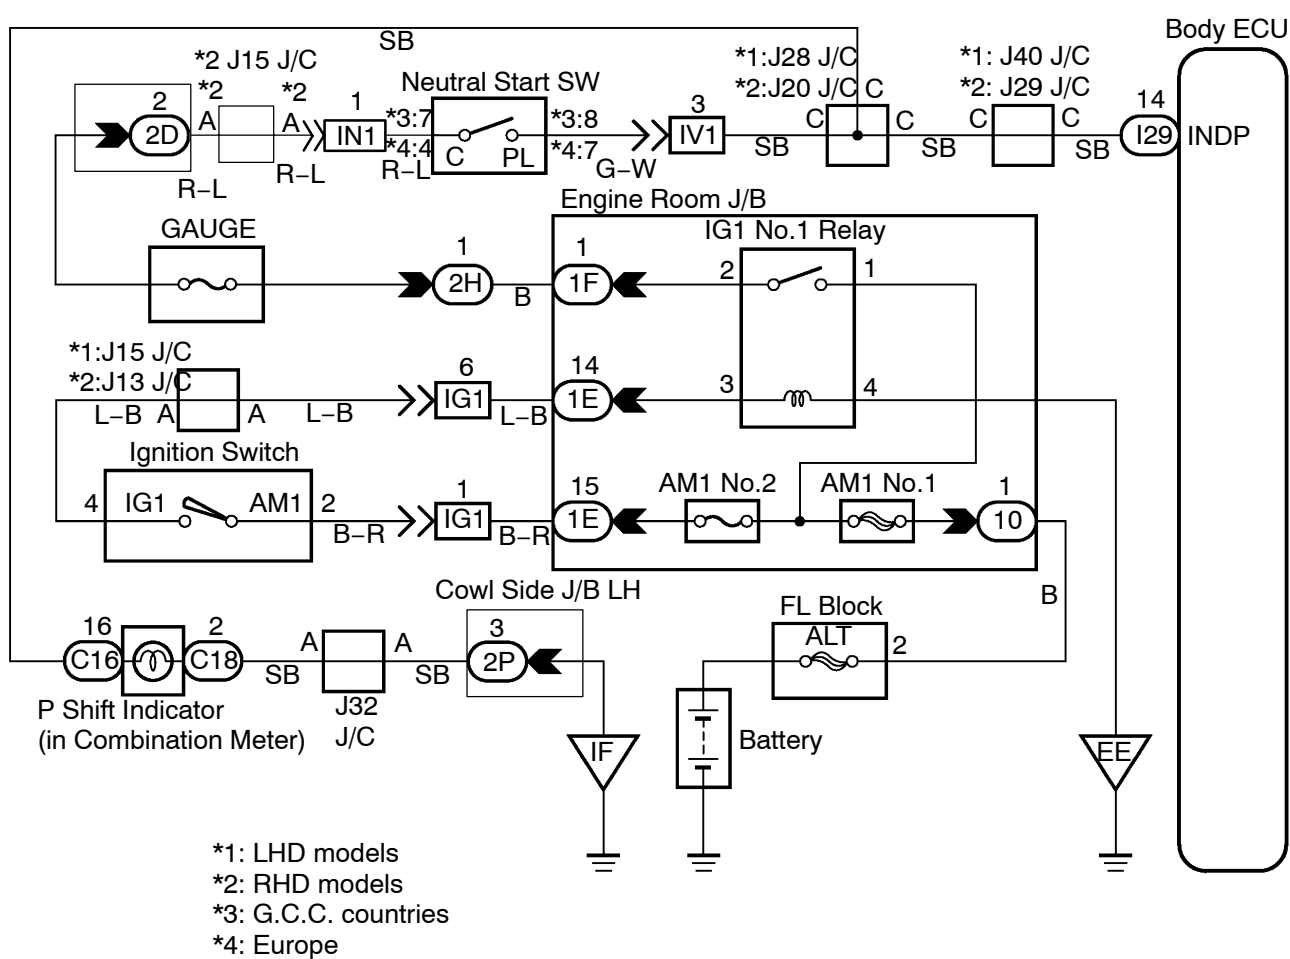

I08809

INSPECTION PROCEDURE

1	Check A/T shift operation.
---	----------------------------

CHECK:

Check that the A/T shift operates normally.

NG	Proceed to AT troubleshooting. (A343F: See page DI-1) (A442F: See page DI-77)
----	---

OK

2	Check harness and connector between Body ECU and neutral start switch (See page IN-35).
---	---

NG	Repair or replace harness or connector.
----	---

OK

Check and replace Body ECU (See page IN-35).
--