


DTC	RrDEF, F/D	Water Temperature Sensor Circuit
-----	------------	----------------------------------

CIRCUIT DESCRIPTION

This sensor detects the engine coolant temperature and sends the appropriate signals to the A/C amplifier.


Blinking light	Detection Item	Trouble Area
RrDEF F/D	Open or short in engine coolant temperature sensor circuit.	• Engine coolant temperature sensor. • Harness or connector between engine coolant temperature sensor and ECM. • Harness or connector between A/C amplifier and ECM. • A/C amplifier. • ECM

WIRING DIAGRAM

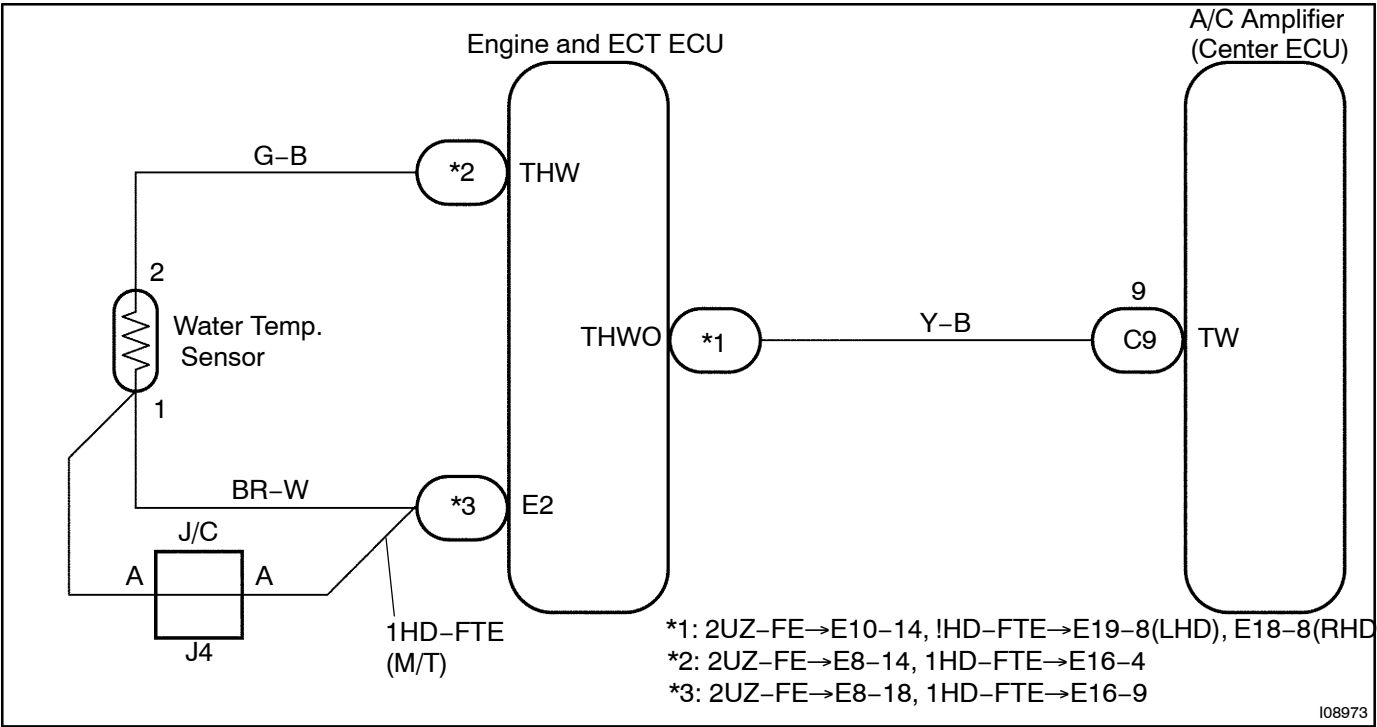

INSPECTION PROCEDURE

1	Check voltage between terminals TW and GND of A/C amplifier connector.
---	--

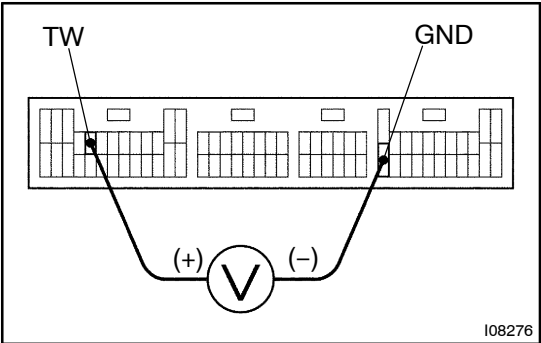

PREPARATION:

Remove A/C amplifier with connectors still connected.

CHECK:

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals TW and GND of A/C amplifier connector at each temperature.

OK:

Voltage :

at 25°C (77°F) : 1.8 – 2.2 V

at 40°C (104°F) : 1.2 – 1.6 V

HINT:

As the temperature increases, the voltage decreases.

NG

Go to step 3.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-859](#)). However, if RrDEF and F/D indicator light is light up, check and replace A/C amplifier.

2

Check engine coolant temperature sensor circuit (Refer to Engine Repair Manual).

NG

Replace engine coolant temperature sensor.

OK

3

Check harness and connector between A/C amplifier and ECM ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.