

TERMS

ABBREVIATIONS USED IN THIS MANUAL

IN08X-01

Abbreviations	Meaning
ABS	Anti-Lock Brake System
A/C	Air Conditioner
AHC	Active Height Control
ALR	Automatic Locking Retractor
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
BTDC	Before Top Dead Center
CB	Circuit Breaker
CRS	Child Restraint System
DEF	Defogger
Diff.	Differential
DOHC	Double Over Head Cam
DP	Dash Pot
DRL	Daytime Running Light
DTC	Diagnostic Trouble Code
ECU	Electronic Control Unit
E/G	Engine
ELR	Emergency Locking Retractor
EPR	Evaporator pressure Regulator
ESA	Electronic Spark Advance
EX	Exhaust (Manifold, Valve)
FIPG	Formed in Place Gasket
FL	Fusible Link
FPU	Fuel Pressure Up
Fr	Front
HID	High Intensity Discharge (Head Lamp)
HAC	High Altitude Compensation
IFS	Independent Front Suspension
IG	Ignition
IIA	Integrated Ignition Assembly
I/P	Instrument Panel
IN	Intake (Manifold, Valve)
J/B	Junction Block
J/C	Junction Connector
LED	Light Emitting Diode
LH	Left-Hand
LHD	Left-Hand Drive
LLC	Long Life Coolant (Year Around Coolant)
Max.	Maximum
Min.	Minimum
MP	Multipurpose
M/T	Manual Transmission

INTRODUCTION – TERMS

O/D, OD	Overdrive
O/S	Oversize
PCV	Positive Crankcase Ventilation
PKB	Parking Brake
PS	Power Steering
RFS	Rigid Front Suspension
RH	Right-Hand
RHD	Right-Hand Drive
Rr	Rear
SRS	Supplemental Restraint System
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
SW	Switch
TDC	Top Dead center
TEMS	Toyota Electronic Modulated Suspension
TEMP.	Temperature
T/F	Transfer
T/M	Transmission
U/S	Undersize
VCV	Vacuum Control Valve
VSC	Vehicle Skid Control
VSV	Vacuum Switching Valve
VTV	Vacuum Transmitting Valve
w/	With
w/o	Without
4WD	Four Wheel Drive Vehicles (4x4)