


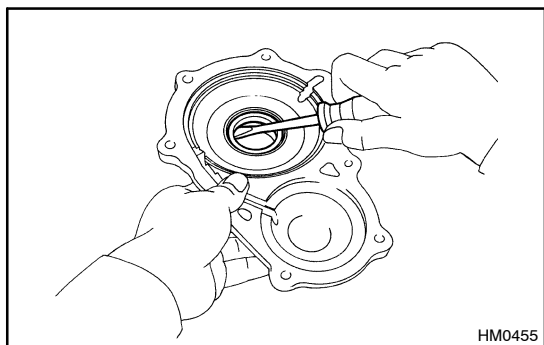


HM0455

REPLACEMENT

IF NECESSARY REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.

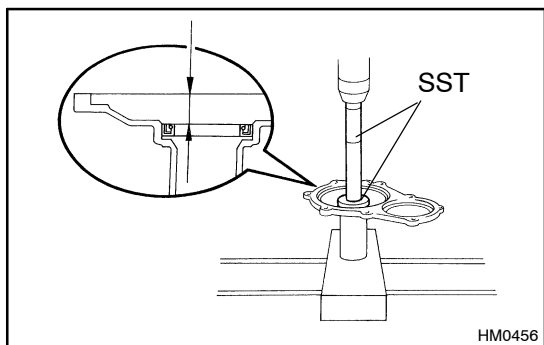

HM0456

- (b) Using SST and a press, drive in a new oil seal.
SST 09950-60010 (09951-00460), 09951-07150
Drive in depth: 15.4–16.2 mm (0.606–0.638 in.)