 
 
 
 
 
 
 
 
 
 


 
# MANUAL TRANSMISSION (H151F)

## SST (Special Service Tools)

PP0EA-02

|                                                                                     |               |                                            |                                                     |
|-------------------------------------------------------------------------------------|---------------|--------------------------------------------|-----------------------------------------------------|
|    | 09316-60011   | Transmission & Transfer Bearing Replacer   |                                                     |
|    | (09316-00011) | Replacer Pipe                              | Output shaft rear bearing<br>Gear spline piece No.5 |
|    | (09316-00021) | Replacer "A"                               |                                                     |
|    | 09316-20011   | Transfer Bearing Replacer                  | Input shaft bearing                                 |
|    | 09523-36010   | Rear Axle Hub Guide Tool                   |                                                     |
|  | 09555-55010   | Differential Drive Pinion Bearing Replacer |                                                     |
|  | 09950-00020   | Bearing Remover                            |                                                     |
|  | 09950-30010   | Puller A Set                               |                                                     |
|  | 09950-40011   | Puller B Set                               | Rear bearing outer race                             |
|  | 09950-60010   | Replacer Set                               |                                                     |
|  | (09951-00460) | Replacer 46                                | Front bearing retainer oil seal                     |
|  | (09951-00640) | Replacer 64                                | Oil pump cover oil seal                             |

PREPARATION - MANUAL TRANSMISSION (H151F)

|                                                                                   |                             |                                                            |
|-----------------------------------------------------------------------------------|-----------------------------|------------------------------------------------------------|
|  | 09950-70010    Handle Set   |                                                            |
|  | (09951-07150)    Handle 150 | Oil pump cover oil seal<br>Front bearing retainer oil seal |