 
 
 
 
 
 
 
 


 
MANUAL TRANSMISSION (R151F)

SST (Special Service Tools)

PP1GU-01

	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	Output shaft rear bearing Gear spline piece No.5
	(09316-00031)	Replacer "B"	5th gear
	(09316-00071)	Replacer "F"	Output shaft rear bearing Output shaft center bearing
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	Input shaft bearing
	09950-00020	Bearing Remover	
	09950-40011	Puller B Set	Output shaft rear bearing
	09950-50010	Puller C Set	Gear spline piece No.5
	09950-60010	Replacer Set	
	(09951-00510)	Replacer 51	Front bearing retainer oil seal
	(09951-00570)	Replacer 57	Transfer adaptor oil seal
	(09951-00620)	Replacer 62	Counter rear bearing

PREPARATION - MANUAL TRANSMISSION (R151F)

	09950-70010 Handle Set
	(09951-07150) Handle 150