

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement.

| Case                                                                                                       | Replacing part                  |
|------------------------------------------------------------------------------------------------------------|---------------------------------|
| If the airbag has been deployed.                                                                           | Front passenger airbag assembly |
| If the front passenger airbag assembly has been found to be faulty in trouble-shooting.                    | Front passenger airbag assembly |
| If the front passenger airbag assembly has been found to be faulty during checking items. (See page RS-26) | Front passenger airbag assembly |
| If the instrument panel has been found to be faulty during checking items. (See page RS-26)                | Instrument panel                |
| If the instrument panel reinforcement has been found to be faulty during checking items. (See page RS-26)  | Instrument panel reinforcement  |
| If the front passenger airbag assembly has been dropped.                                                   | Front passenger airbag assembly |

### CAUTION:

**For replacement of the front passenger airbag assembly, see page RS-25 and RS-35.  
Be sure to follow the correct procedure.**