


TIRE AND WHEEL INSPECTION

SA1A2-01

1. INSPECT TIRE


- (a) Check the tires for wear and proper inflation pressure.
Cold tire inflation pressure

Tire size	Front kPa (kgf/cm ² , psi)	Rear kPa (kgf/cm ² , psi)
LT235/85R16 108/104N	260 (2.6, 38)	375 (3.75, 54)
275/70R16 114H 114S	220 (2.2, 32)	220 (2.2, 32)
7.50R16-6PRLT	260 (2.6, 38)	375 (3.75, 54)

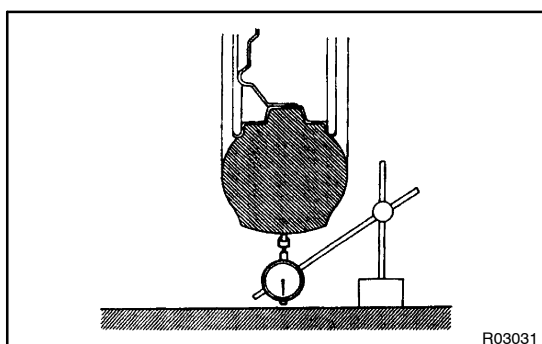

R03031

- (b) Check the tire runout.
Tire runout: 3.0 mm (0.118 in.) or less

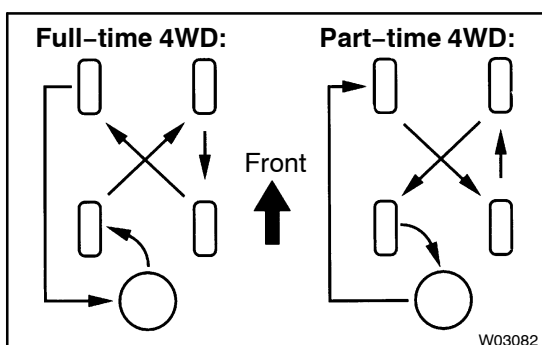


W03082

2. ROTATE TIRE

HINT:

See the illustration for where to rotate each tire when you include the spare tire in rotation.

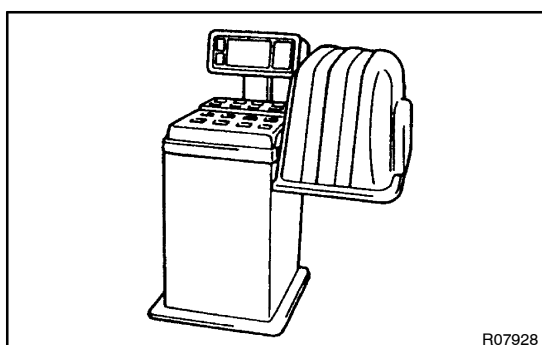

R07928

3. INSPECT WHEEL BALANCE

- (a) Check and adjust the Off-the car balance.
(b) If necessary, check and adjust the On-the car balance.
Imbalance after adjustment: 14.0 g (0.031 lb) or less

- 4. CHECK FRONT SUSPENSION FOR LOOSENESS**
- 5. CHECK STEERING LINKAGE FOR LOOSENESS**
- 6. CHECK BALL JOINT FOR LOOSENESS**
- 7. CHECK SHOCK ABSORBER WORKS PROPERLY**
 - Check for oil leak
 - Check the mounting bushings for wear
 - Bounce front and rear of the vehicle