

REMOVAL

1. REMOVE WHEEL COVER

2. REMOVE FREE WHEEL HUB COVER


- (a) Set the control handle to FREE.
- (b) Remove the 6 bolts and pull off the free wheel hub cover.
- (c) Remove the gasket.

3. REMOVE SNAP RING

Using a snap ring expander, remove the snap ring.

4. REMOVE FREE WHEEL HUB BODY

- (a) Remove the 6 nuts and washers.

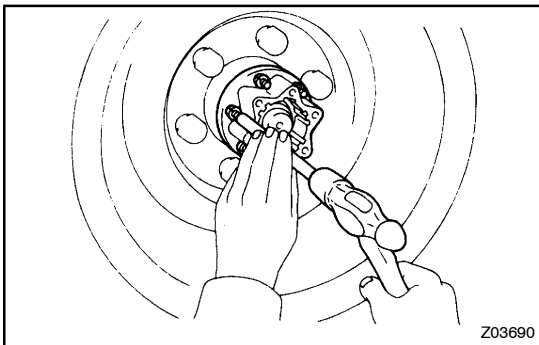

- (b) Using a brass bar and hammer, tap on the bolt heads and remove the 6 cone washers.
- (c) Pull off the free wheel hub body.
- (d) Remove the gasket.