


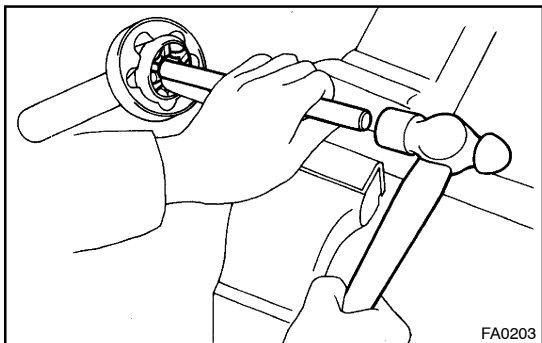

DISASSEMBLY

REMOVE OUTER SHAFT

- (a) Hold the inner shaft in a vise.
- (b) Place a brass bar against the joint inner race and remove the outer shaft.

HINT:

When removing the outer shaft, the snap ring will be broken.