



## REPLACEMENT

### 1. REPLACE NO. 1 BUSHING


- (a) Using a chisel and hammer, pry up the flange of the No. 1 bushing.

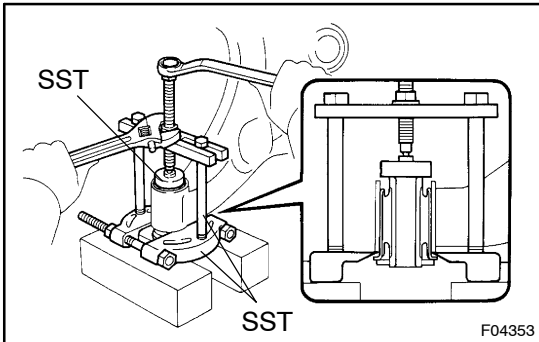

- (b) Using SST, remove the No. 1 bushing.  
 SST 09710-30021 (09710-03101),  
 09950-00020, 09950-00030,  
 09950-40011 (09957-04010)

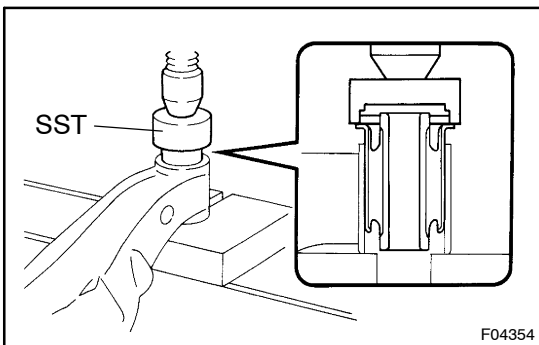


- (c) Using SST and a press, install a new bushing.  
 SST 09726-36010

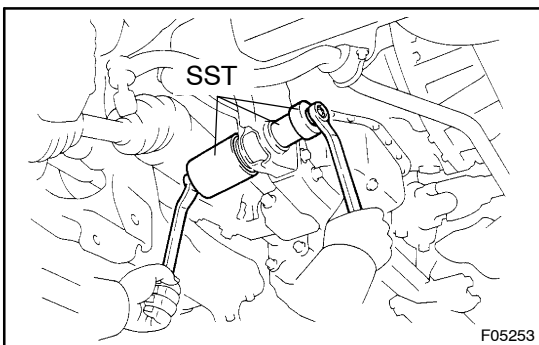


### 2. REPLACE NO. 2 BUSHING

- (a) Using SST, remove the No. 2 bushing.  
 SST 09710-22021 (09710-01071),  
 09726-35011 (09726-05021),  
 09830-36010

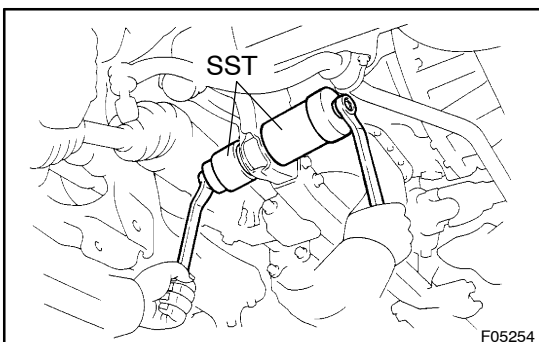

- (b) Using SST, install a new bushing.  
 SST 09631-32020, 09830-36010

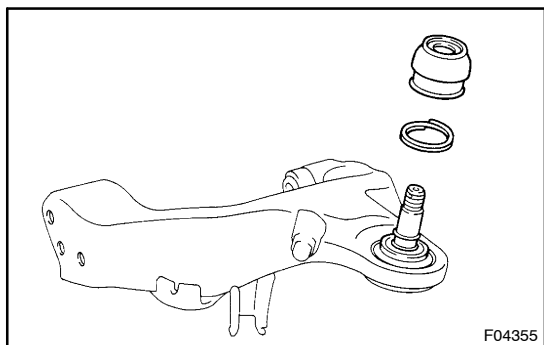**3. REPLACE DUST COVER**

- (a) Remove the wire and dust cover.
- (b) Coat the ball joint with grease in the boot kit.
- (c) Install a new dust cover and wire.