


INSPECTION

INSPECT REAR AXLE SHAFT

(a) Check for wear or damage.

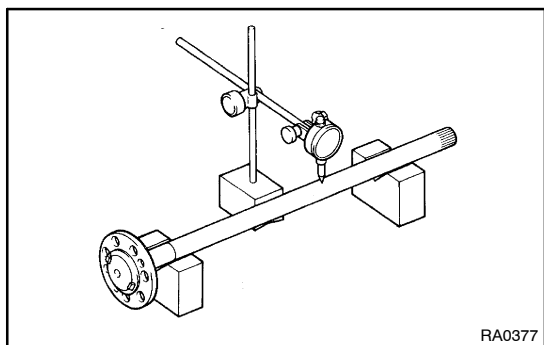

(b) Using a dial indicator, check the runout of axle shaft.

Maximum runout: 0.8 mm (0.031 in.)

If the runout is greater than the maximum, replace the axle shaft.