


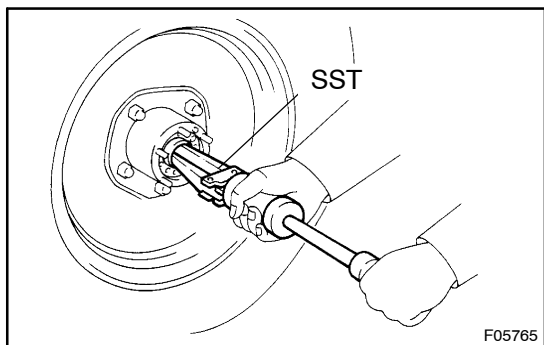


REPLACEMENT

REPLACE OIL SEAL

- (a) Using SST, remove the oil seal.

SST 09308-00010

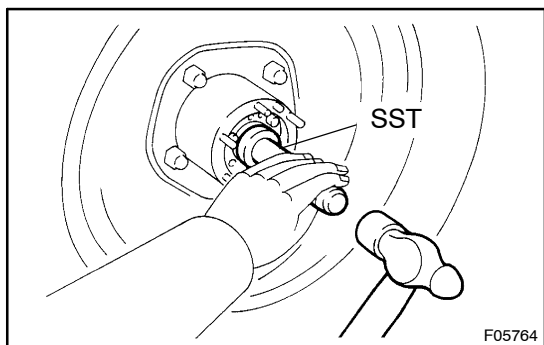

- (b) Using SST and a hammer, install a new oil seal into the hub.

SST 09517-36010

- (c) Coat the MP grease to the oil seal lip.