


REMOVAL

1. **REMOVE REAR WHEEL**
2. **REMOVE REAR AXLE SHAFT** ([See page SA-155](#))
3. **DRUM BRAKE:**
REMOVE DRUM
4. **DISC BRAKE:**
REMOVE BRAKE CALIPER AND DISC
 - (a) Remove the 2 bolts, washers and brake caliper.
 - (b) Support the brake caliper securely.
5. **REMOVE REAR AXLE BEARING LOCK NUT**
 - (a) Remove the 2 screws from the lock nut.

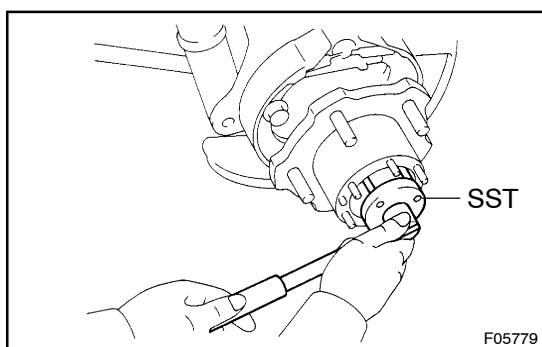

-
-
-
-
-
- (b) Using SST, remove the lock nut.
SST 09509-25011

6. REMOVE REAR AXLE HUB

Pull out the axle hub, remove the lock nut plate and outer bearing.