



REAR WHEEL HUB BOLT (Independent Front Suspension) REPLACEMENT

SA18B-03


1. REMOVE REAR WHEEL
2. DRUM BRAKE:
REMOVE DRUM

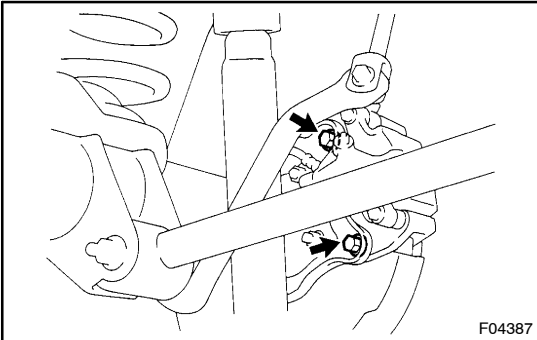

3. DISC BRAKE:
REMOVE BRAKE CALIPER AND DISC
 - (a) Remove the 2 bolts, brake caliper and disc.
 - (b) Support the brake caliper securely.

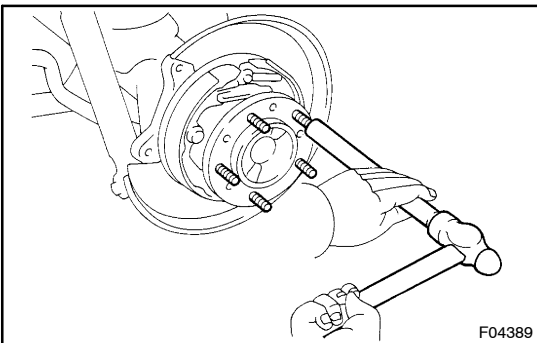

4. REMOVE HUB BOLT
Using a brass bar and hammer, remove the hub bolt.

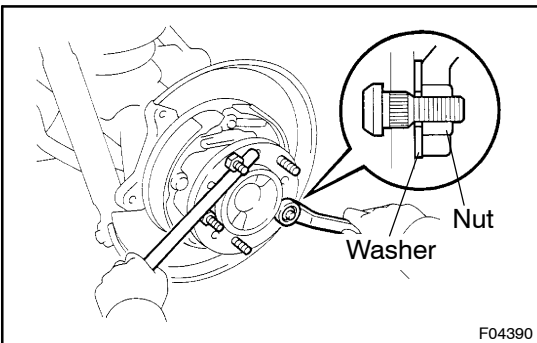

5. INSTALL HUB BOLT
Install a washer and nut to a new hub bolt, as shown in the illustration, and install the hub bolt by torquing the nut.
6. DISC BRAKE:
INSTALL DISC AND BRAKE CALIPER
Install the disc and brake caliper with the 2 bolts.
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
7. DRUM BRAKE:
INSTALL DRUM
8. INSTALL REAR WHEEL
Torque:
Steel wheel: 209 N·m (2,131 kgf·cm, 154 ft·lbf)
Aluminum wheel: 131 N·m (1,340 kgf·cm, 97 ft·lbf)