


REMOVAL

1. **REMOVE REAR WHEEL**
Torque: 209 N·m (2,131 kgf·cm, 154 ft·lbf)
2. **SUPPORT AXLE HOUSING WITH JACK**
3. **DISCONNECT ABS SPEED SENSOR WIRE HARNESS**

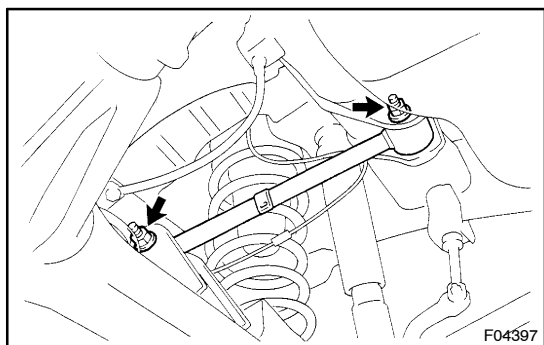


4. REMOVE UPPER CONTROL ARM

Remove the 2 nuts, washers, bolts and upper control arm.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nuts.

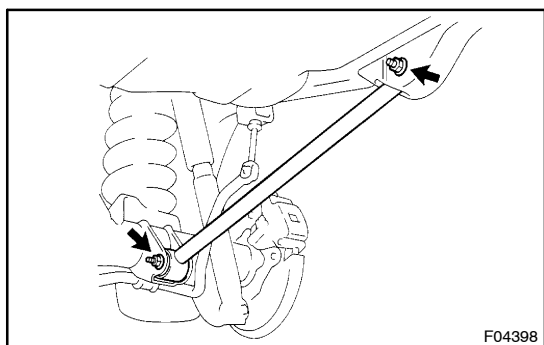

5. REMOVE LOWER CONTROL ARM

Remove the 2 nuts, washers, bolts and lower control arm.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nuts.