

REMOVAL


1. REMOVE REAR WHEEL

Torque:

Steel wheel: 209 N·m (2,131 kgf·cm, 154 ft·lbf)

Aluminum wheel: 131 N·m (1,340 kgf·cm, 97 ft·lbf)

2. SUPPORT REAR AXLE HOUSING WITH JACK

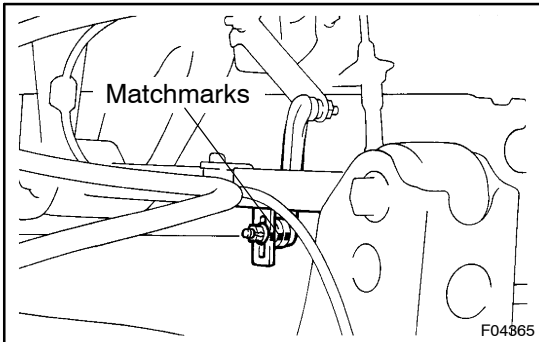

3. w/ AHC System – LH Side:

DISCONNECT HEIGHT CONTROL SENSOR LINK


- Place matchmarks on the height control sensor link and upper control arm.
- Remove the nut and disconnect the height control sensor link.

Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)

4. REMOVE UPPER CONTROL ARM

- w/ ABS:
Disconnect the ABS speed sensor wire harness.
- RH side:
Remove the bolt from the heat insulator.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

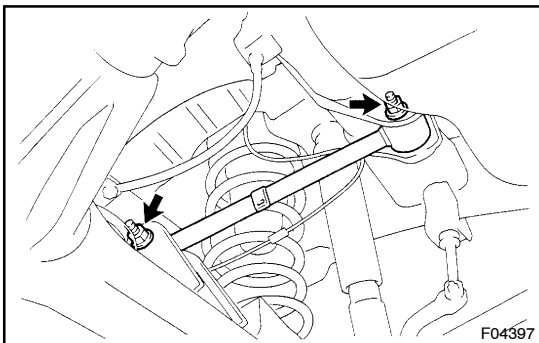


- Remove the 2 nuts, washers, bolts, and upper control arm.

Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)

HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.

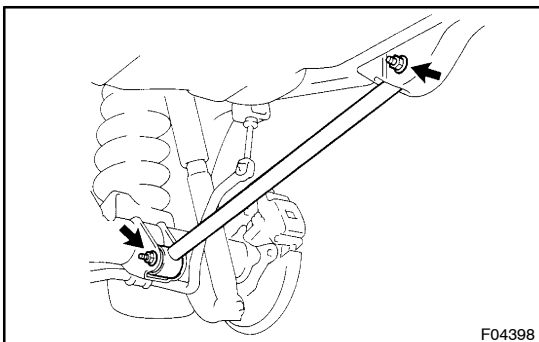

5. REMOVE LOWER CONTROL ARM

Remove the 2 nuts, washers, bolts and lower control arm.

Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)

HINT:

At the time of installation, please refer to the following items.

- Replace the used 2 nuts with new ones.
- After stabilizing the suspension, torque the nuts.