



REMOVAL

1. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
2. **w/ Airbag:**
REMOVE STEERING WHEEL PAD
(See page SR-13)
3. **w/ Airbag:**
REMOVE STEERING WHEEL
(See page SR-13)
4. **LHD:**
REMOVE LH FRONT FENDER APRON SEAL
Remove the 9 clips.
5. **RHD:**
REMOVE RH FRONT FENDER APRON SEAL
Remove the 11 clips.

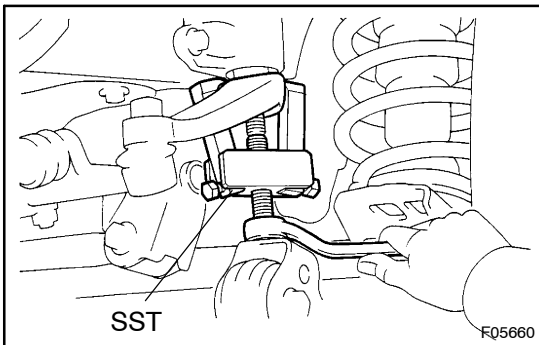

6. **DISCONNECT PITMAN ARM**
 - (a) Remove the nut and spring washer.
 - (b) Using SST, disconnect the pitman arm with relay rod from the gear assembly.
SST 09628-62011
7. **REMOVE JOINT COVER**
Remove the 2 bolts.
8. **DISCONNECT SLIDING YOKE**
(See page SR-13)

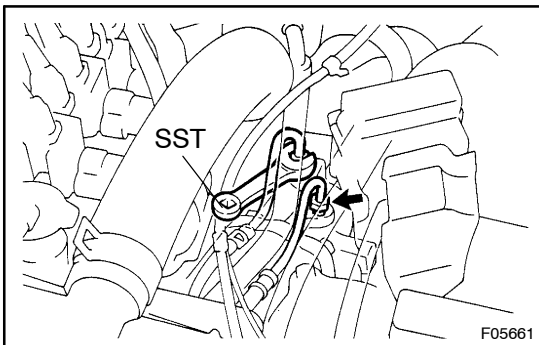

9. **DISCONNECT PRESSURE FEED AND RETURN TUBES**
Using SST, disconnect the tube.
SST 09631-22020
10. **REMOVE PS GEAR ASSEMBLY**
Remove the 4 bolts and nuts.