

INSTALLATION

Installation is in the reverse order of removal ([See page TR-6](#)).

HINT:

After installation, do the road test.