


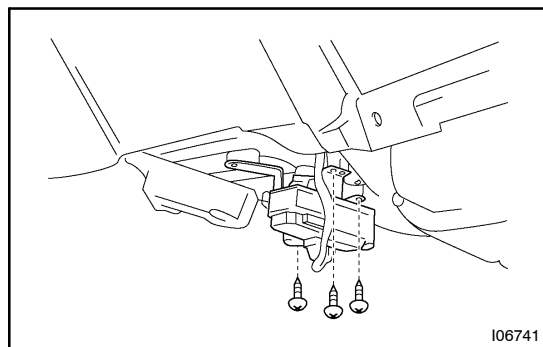


AIR MIX SERVOMOTOR INSPECTION

AC1J4-01


1. REMOVE AIR MIX SERVOMOTOR

- Disconnect the connector.
- Remove the 2 screws and servomotor.

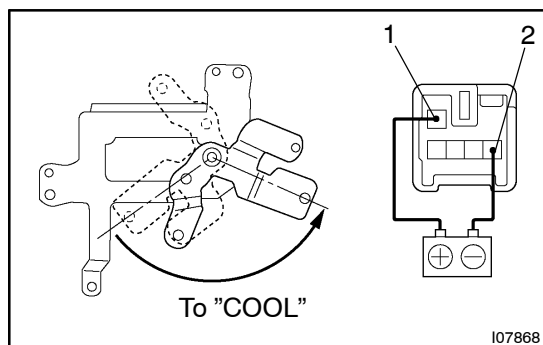


2. INSPECT AIR MIX SERVOMOTOR

- Inspect servomotor operation.
 - Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, then check that the arm turns to "COOL" side smoothly.

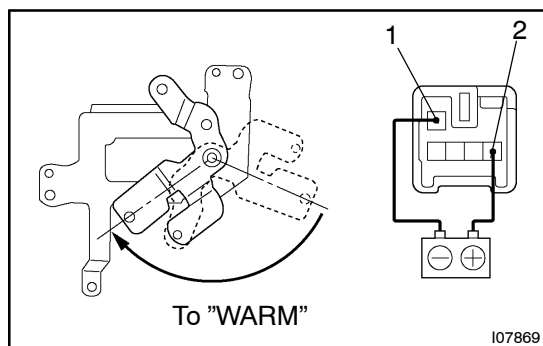

- Connect the positive (+) lead from the battery to terminal 2 and negative (-) lead to terminal 1, then check that the arm turns to "WARM" side smoothly.

If operations are not as specified, replace the servomotor.

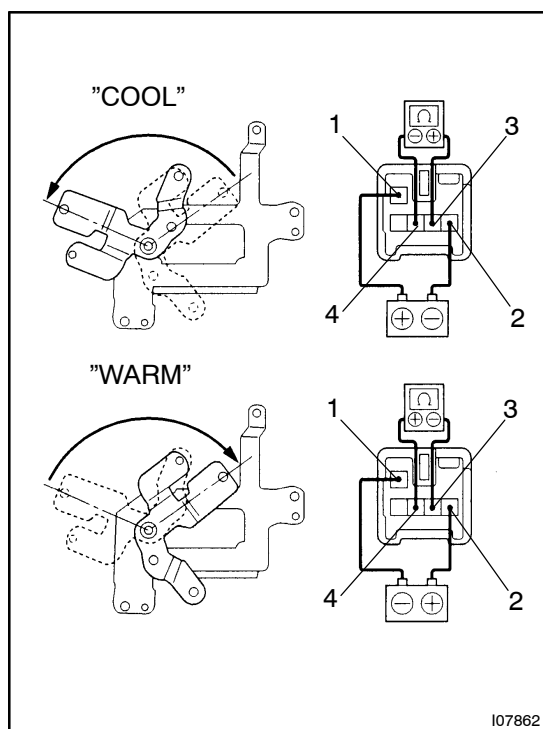

- Inspect position sensor resistance. Measure resistance between terminals at servomotor arm each position as shown in the chart.

Tester connection	Condition	Specified condition
4 - 5	Constant	4.2 - 7.8 k Ω
3 - 4	Arm position at "COOL"	0.76 - 1.4 k Ω
3 - 4	Arm position at "WARM"	3.4 - 6.4 k Ω

If resistance is not as specified, replace the servomotor.

3. INSTALL SERVOMOTOR

- Install the servomotor with the 2 screws.
- Connect the connector.