


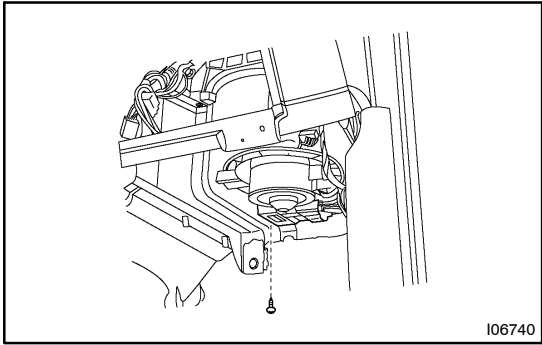


I06740

BLOWER MOTOR CONTROL RELAY INSPECTION

AC1J2-01

1. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connectors.
- (b) Remove the screw and relay.

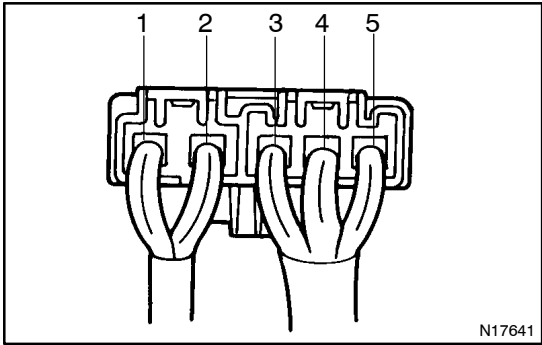

N17641

2. INSPECT BLOWER MOTOR CONTROL RELAY

Connect the connector to the relay and inspect the wire harness side connector from the back side as shown in the chart.

Test condition:

- Turn ignition switch to ON

Tester connection	Condition	Specified condition
1 - Ground	Constant	Continuity
2 - Ground	Blower speed control switch at "LO" position	Approx. 3.5 V
	Blower speed control switch at "LO" position	Approx. 2.2 V
3 - Ground	Operate blower motor	Battery positive voltage
	Blower speed control switch at "OFF" position	No voltage
4 - 5	Blower speed control switch at "LO" position	Approx. 3.6 V
	Blower speed control switch at "M2" position	Approx. 8.3 V
	Blower speed control switch at "HI" position	Approx. 13.0 V

If circuit is not as specified, replace the relay.

3. INSTALL BLOWER MOTOR CONTROL RELAY

- (a) Install the relay with the screw.
- (b) Connect the connectors.