

COMPRESSOR AND MAGNETIC CLUTCH

AC11K-01

ON-VEHICLE INSPECTION

1. INSPECT COMPRESSOR FOR METALLIC SOUND

Check there is abnormal metallic sound from the compressor when the A/C switch is ON.


If abnormal metallic sound is heard, replace the compressor assembly.

2. INSPECT REFRIGERANT PRESSURE

(See page [AC-3](#))

3. INSPECT VISUALLY FOR LEAKAGE OF REFRIGERANT

Using a gas leak detector, check for leakage of refrigerant. If there is any leakage, replace the compressor assembly.

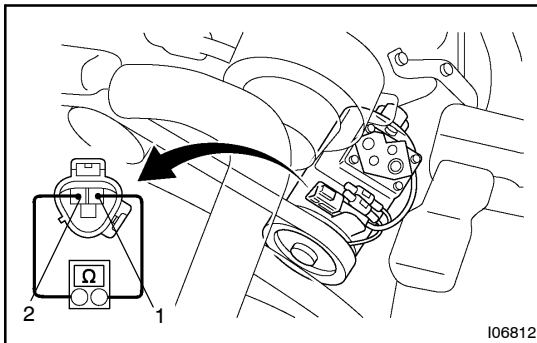

4. INSPECT COMPRESSOR LOCK SENSOR RESISTANCE

- (a) Disconnect the connector.
- (b) Measure resistance between terminals 1 and 2.

Standard resistance:

570 – 1,050 Ω at 20°C (68 °F)

If resistance is not as specified, replace the compressor.


5. MAKE THESE VISUAL CHECKS:

- (a) Leakage of grease from the clutch bearing.
- (b) Signs of oil on the pressure plate or rotor.

6. INSPECT MAGNETIC CLUTCH BEARING FOR NOISE

- (a) Start engine.
- (b) Check for abnormal noise from the compressor when the A/C switch is OFF.

If abnormal noise is being emitted, replace the rotor of magnetic clutch.

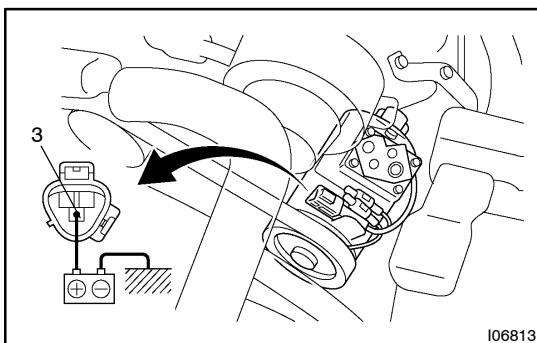

7. INSPECT MAGNETIC CLUTCH OPERATION

- (a) Disconnect the connector.
 - (b) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to the body ground.
 - (c) Check that the magnetic clutch is energized.
- If operation is not as specified, replace the magnetic clutch.