



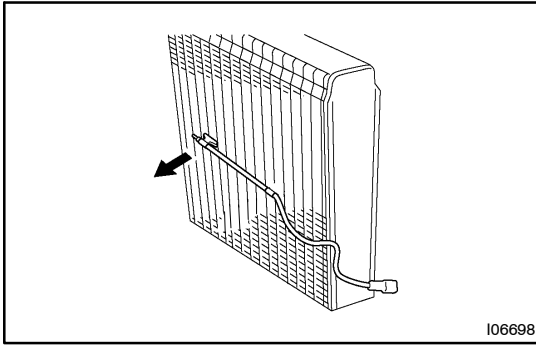

## DISASSEMBLY

### 1. PULL OUT EVAPORATOR TEMPERATURE SENSOR

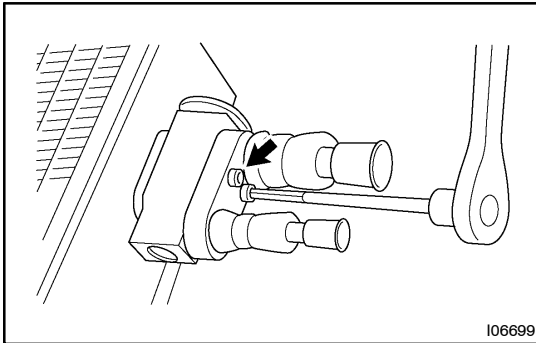

### 2. REMOVE EXPANSION VALVE

Using a hexagon wrench (5.0 mm, 0.20 in.), remove the 2 bolts and separate the expansion valve and evaporator.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

#### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

#### HINT:

At the time of reassembly, please refer to the following item.

- Lubricate 4 new O-rings with compressor oil and install them to the valve.
- If evaporator is replaced, add compressor oil to the evaporator.

**Add: 40 cc (1.4 fl.oz.)**

**Compressor oil: ND-OIL8 or equivalent**