

INSPECTION

1. CHECK EVAPORATOR FINS FOR BLOCKAGE


If the fins are clogged, clean them with compressed air.

NOTICE:

Never use water to clean the evaporator.


2. CHECK FITTINGS FOR CRACKS OR SCRATCHES

If necessary, repair or replace.

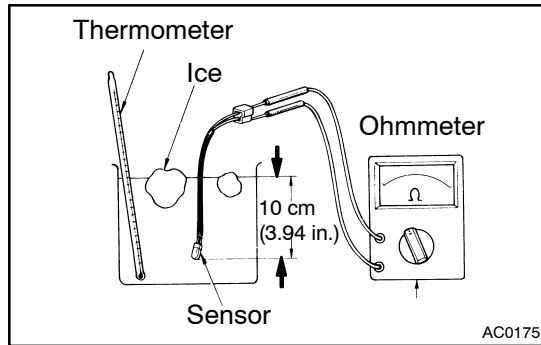

3. INSPECT EVAPORATOR TEMPERATURE SENSOR

- (a) Place the sensor in cold water, and while changing the temperature of the water, measure resistance at the connector and at the same time, measure temperature of the water with a thermometer.

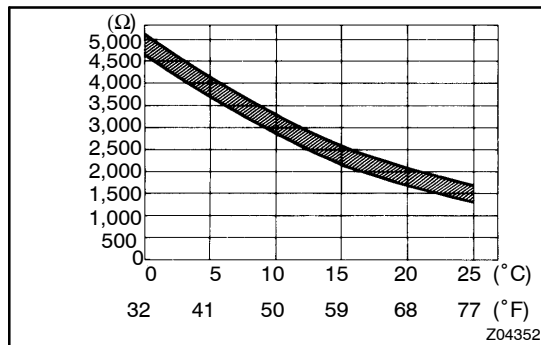

- (b) Compare the 2 readings on the chart.
If resistance value is not as specified, replace the sensor.