

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.


Specified amount: $600 \pm 50\text{g}$ ($21.16 \pm 1.76\text{ oz.}$)

2. DISCONNECT LIQUID AND SUCTION TUBES FROM COOLING UNIT

(See page [AC-24](#))


3. REMOVE INSTRUMENT PANEL

(See page [BO-86](#))

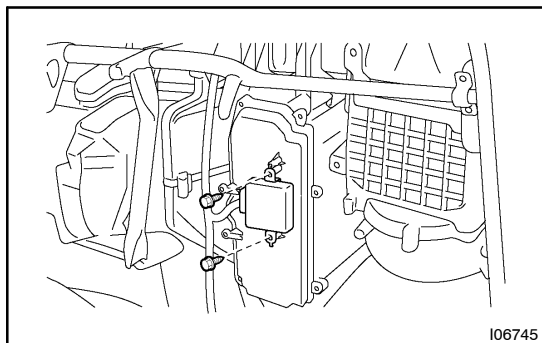

4. REMOVE ANTENNA RELAY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and relay.

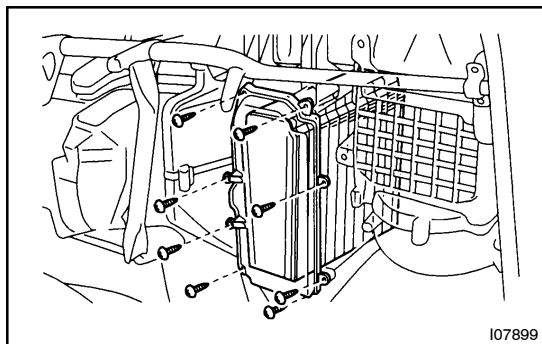

5. REMOVE EVAPORATOR

- (a) Disconnect the connector.
- (b) Disconnect the connector clamp.
- (c) Remove the 8 screws and No .1 cooler cover.
- (d) Pull out the evaporator.