



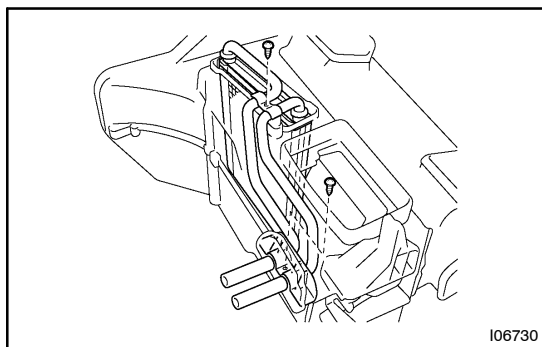

DISASSEMBLY


1. REMOVE HEATER RADIATOR

- (a) Pry out the packing.
- (b) Remove the screw and bracket.
- (c) Remove the screw and clamp.
- (d) Pull out the heater radiator.

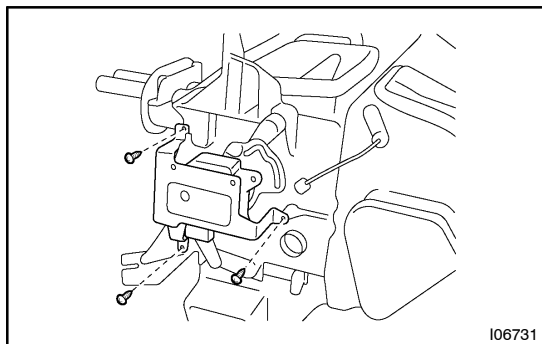


2. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and servomotor.

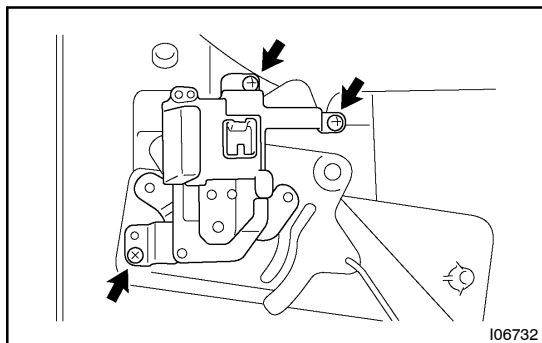


3. REMOVE AIR MIX SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and servomotor.
- (c) Release the claw and remove the wire harness.

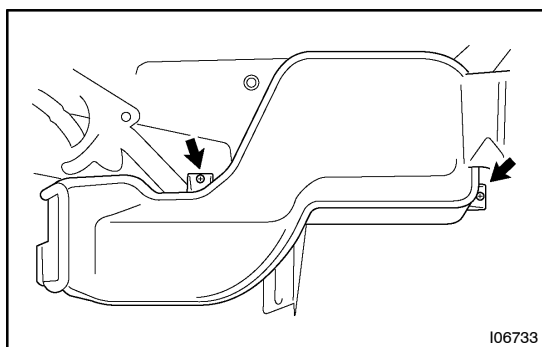

4. REMOVE AIR DUCT (Foot Duct)

Remove the 2 screws and duct.

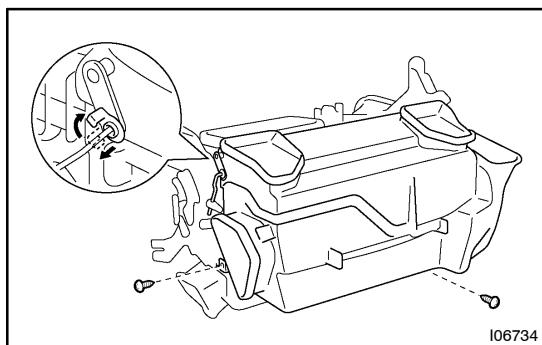

5. REMOVE AIR DUCT (Vent Duct)

- (a) Disconnect the mode damper control link.
- (b) Remove the 2 screws and duct.