


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

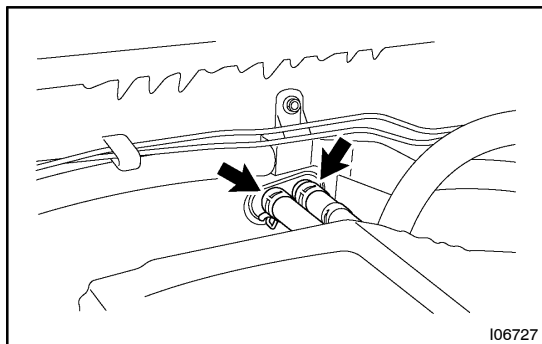

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES


- Using pliers, grip the claws of the hose clip and slide the clip along the hose.
- Disconnect the water hoses from heater radiator pipes.

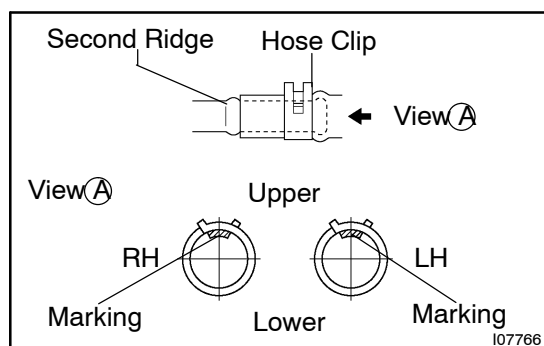

HINT:


At the time of installation , please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as second ridge on the pipe.
 - Install a hose clip in the position as shown in the illustration.
- REMOVE INSTRUMENT PANEL AND REINFORCEMENT**
(See page [BO-86](#))
 - REMOVE COOLING UNIT**
(See page [AC-24](#))

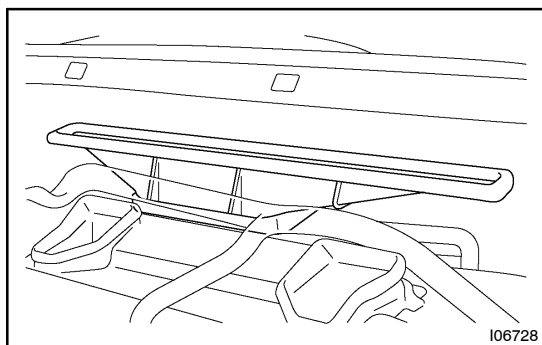

5. REMOVE HEATER UNIT

- Remove the defroster nozzle.

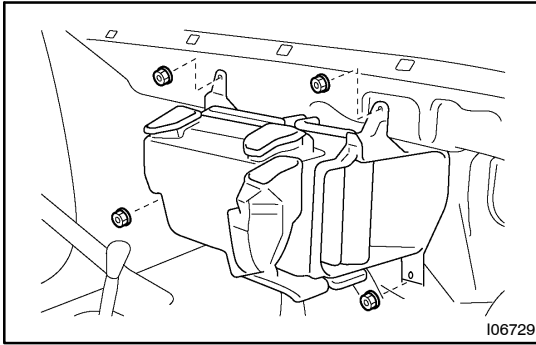

- (b) Disconnect the connector.
- (c) Remove the 4 nuts and heater unit.