

REAR HEATER HI RELAY INSPECTION

1. REMOVE THESE PARTS:
- (a) Front seats

(b) Rear heater control assembly
(See page [AC-95](#))

(c) Rear console box

(d) Front console box cover


(e) Lower center cluster finish panel

(f) Front door scuff plate

(g) Cowl side trims


(h) Rear door scuff plates

(i) Center pillar garnishes
2. SLIDE FLOOR CARPET BACKWARD

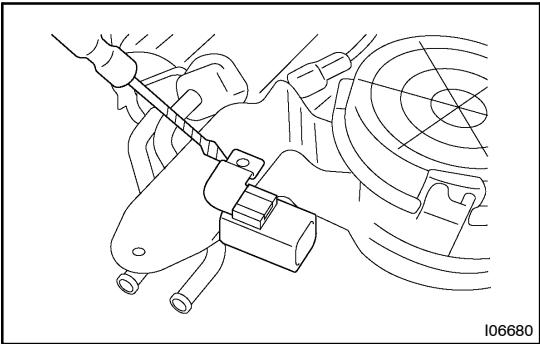

3. REMOVE REAR HEATER RELAY
- (a) Disconnect the connector.

(b) Using a screwdriver, release the claw and remove the relay.

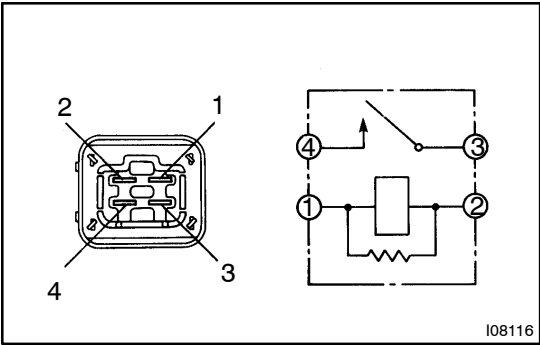

4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL RELAY