


REAR HEATER RELAY INSPECTION

AC1JC-01


1. REMOVE THESE PARTS:

- Front door scuff plate LH
- Cowl side trim LH

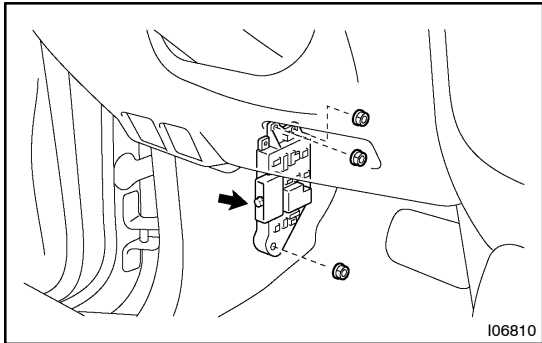


2. REMOVE REAR HEATER RELAY

- Disconnect the connectors.
- Remove the 3 No.2 junction block set nuts.
- Loosen the connector set bolt.
- Pull out the junction block.

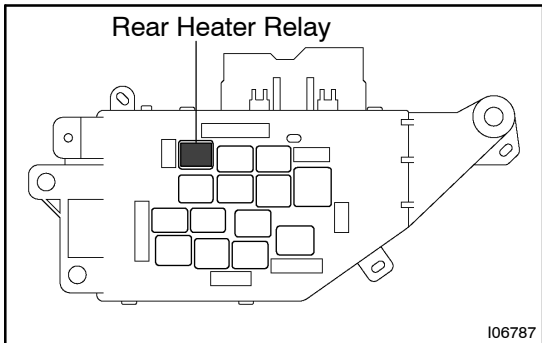

- Remove the relay

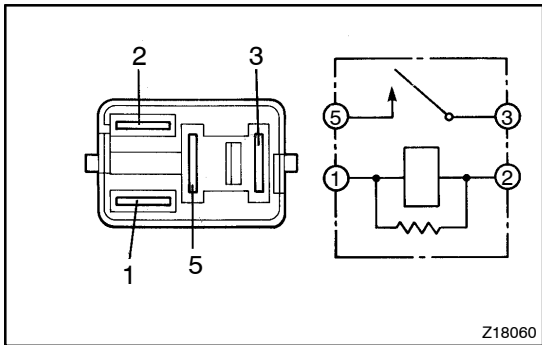

3. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL RELAY

5. INSTALL 3 NO.2 JUNCTION BLOCK SET NUTS

6. INSTALL THESE PARTS:

- Cowl side trim LH
- Front door scuff plate LH