



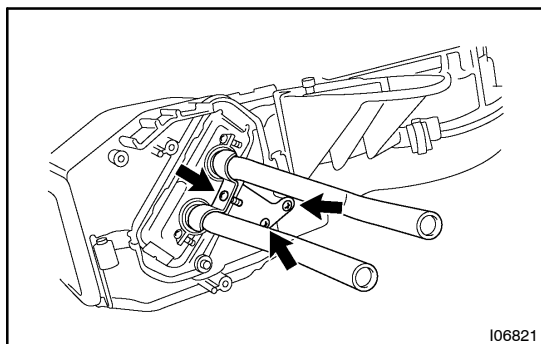

DISASSEMBLY

1. REMOVE HEATER RADIATOR


- (a) Remove the 3 screws and 2 clamps
- (b) Pull out the heater radiator.

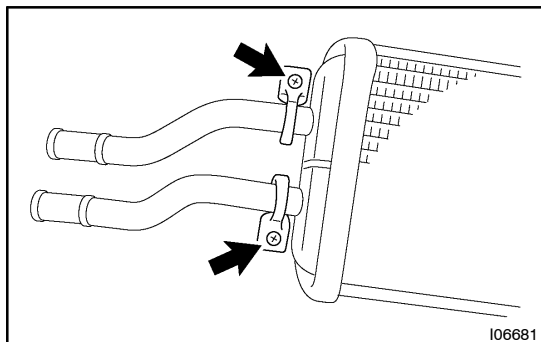

- (c) Remove the 2 screws, 2 clamps and heater radiator pipes.
- (d) Remove the 2 O-rings.


HINT:

At the time of reassembly, please refer to the following item.
Do not reuse the O-rings

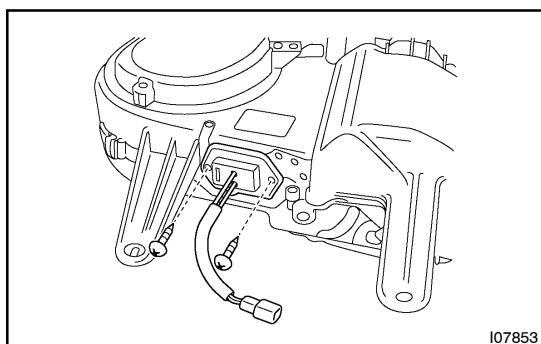

2. REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

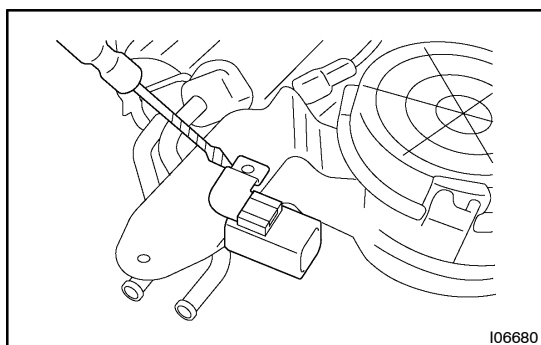


3. REMOVE REAR HEATER HI RELAY

Using a screw driver, release the claw and remove the relay.


HINT:

Tape the screwdriver tip before use.

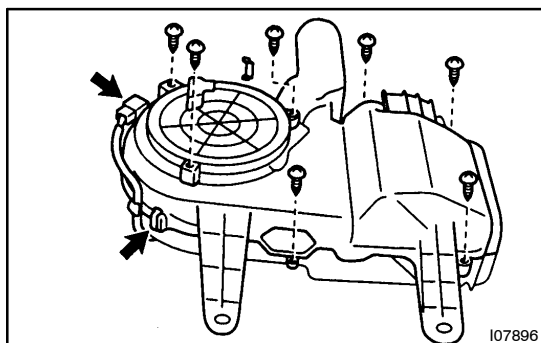


4. REMOVE BLOWER MOTOR

- (a) Remove the 3 screws and cover.
- (b) Remove the 4 screws, 3 holding springs and separate the heater cases.

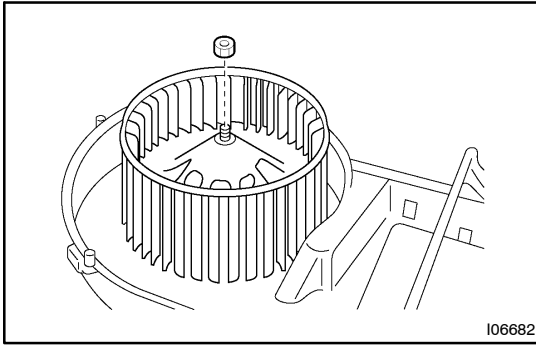

(c) Remove the nut and fan.

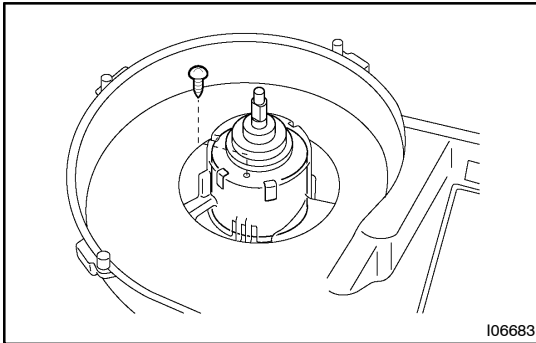

(d) Remove the screws and blower motor.