


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

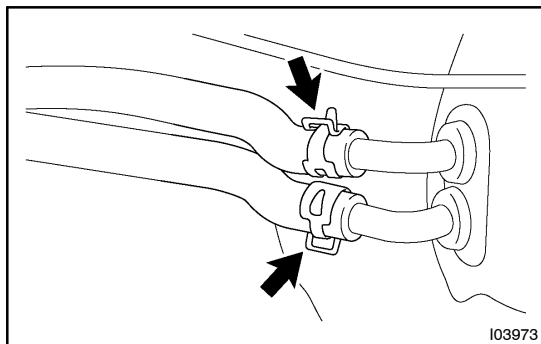

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claws of the clip and slide the clip along the hose
- (b) Disconnect the water hoses

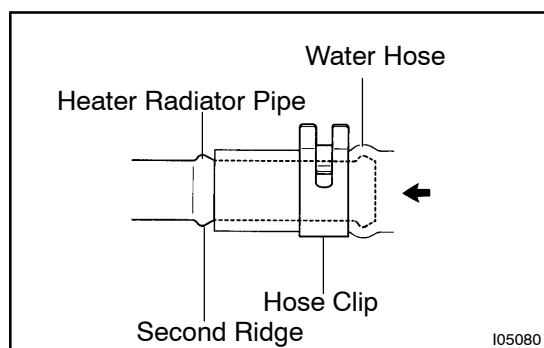

HINT:

At the time of installation, please refer to the following item.

- Push the water hose on to the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in the position, as shown in the illustration.


3. REMOVE THESE PARTS:


- (a) Front seats
- (b) w/o Rear Cooler:
Rear heater control assembly
(See page [AC-95](#))
- (c) Rear console box
- (d) Front console box cover
- (e) Lower center cluster finish panel
- (f) Front door scuff plate
- (g) Cowl side trims
- (h) Rear door scuff plates
- (i) Center pillar garnishes

4. SLIDE FLOOR CARPET BACKWARD


5. REMOVE COOLER BRACKET

Remove the 4 bolts and bracket.

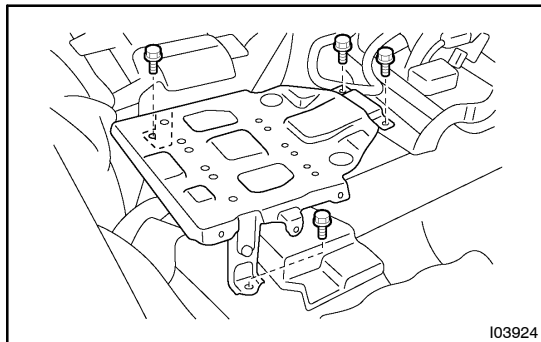

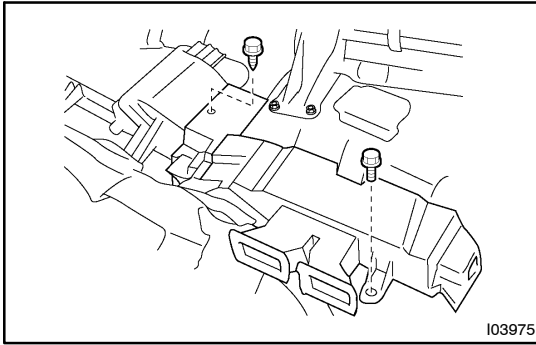**6. REMOVE REAR HEATER DUCT**

Remove the bolt, screw and duct.

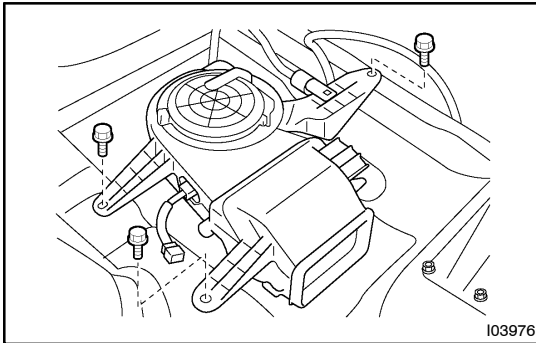**7. REMOVE REAR HEATER UNIT**

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and heater unit.