


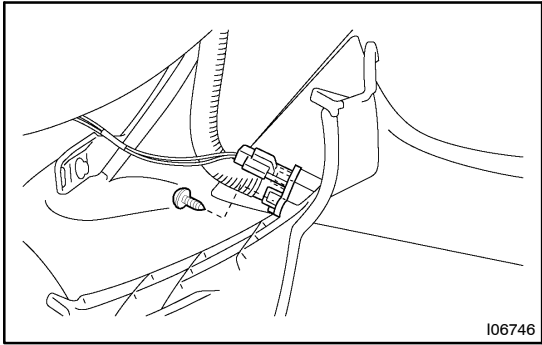


I06746

ROOM TEMPERATURE SENSOR INSPECTION

AC1J7-01

1. REMOVE ROOM TEMPERATURE SENSOR

- Remove the lower No. 1 panel set screw.
- Release the lower No. 1 panel set claws.
- Disconnect the connector and aspirator hose.
- Remove the screw and sensor.

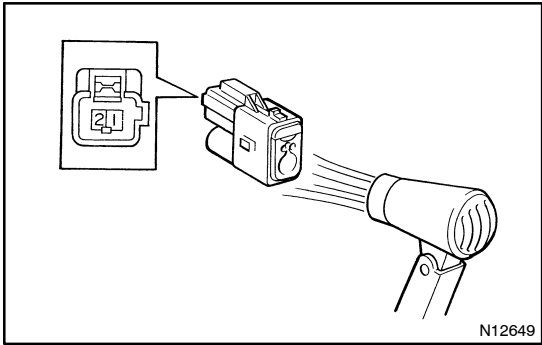

N12649

2. INSPECT ROOM TEMPERATURE SENSOR

Measure resistance between terminals at each temperature as shown in the chart.

Temperature	Specified condition
25 °C (77 °F)	$1.7 \pm 0.85 \Omega$
50 °C (122 °F)	$0.6 \pm 0.1 \Omega$

If resistance is not as specified, replace the sensor.

3. INSTALL ROOM TEMPERATURE SENSOR

- Install the sensor to the lower No. 1 panel with the screw.
- Connect the aspirator hose and connector.
- Install the lower No. 1 panel with the screw.