


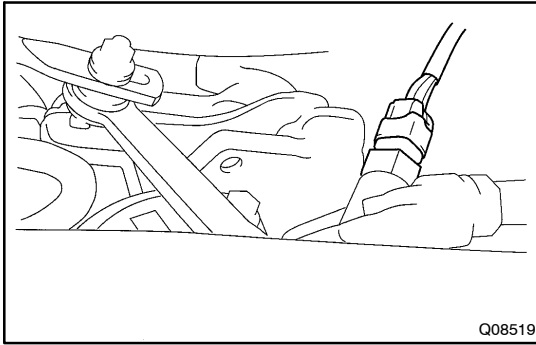

ATF TEMPERATURE SENSOR ON-VEHICLE REPAIR

AT07N-01

1. **REMOVE NO.2 ENGINE UNDER COVER**
2. **DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR**
3. **REMOVE ATF TEMPERATURE SENSOR**
 - (a) Remove the ATF temperature sensor.
 - (b) Remove the O-ring from the ATF temperature sensor.
4. **INSTALL ATF TEMPERATURE SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the ATF temperature sensor.
 - (b) Install the ATF temperature sensor.
Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)
5. **CONNECT ATF TEMPERATURE SENSOR CONNECTOR**
6. **INSTALL NO.2 ENGINE UNDER COVER**