




CIRCUIT

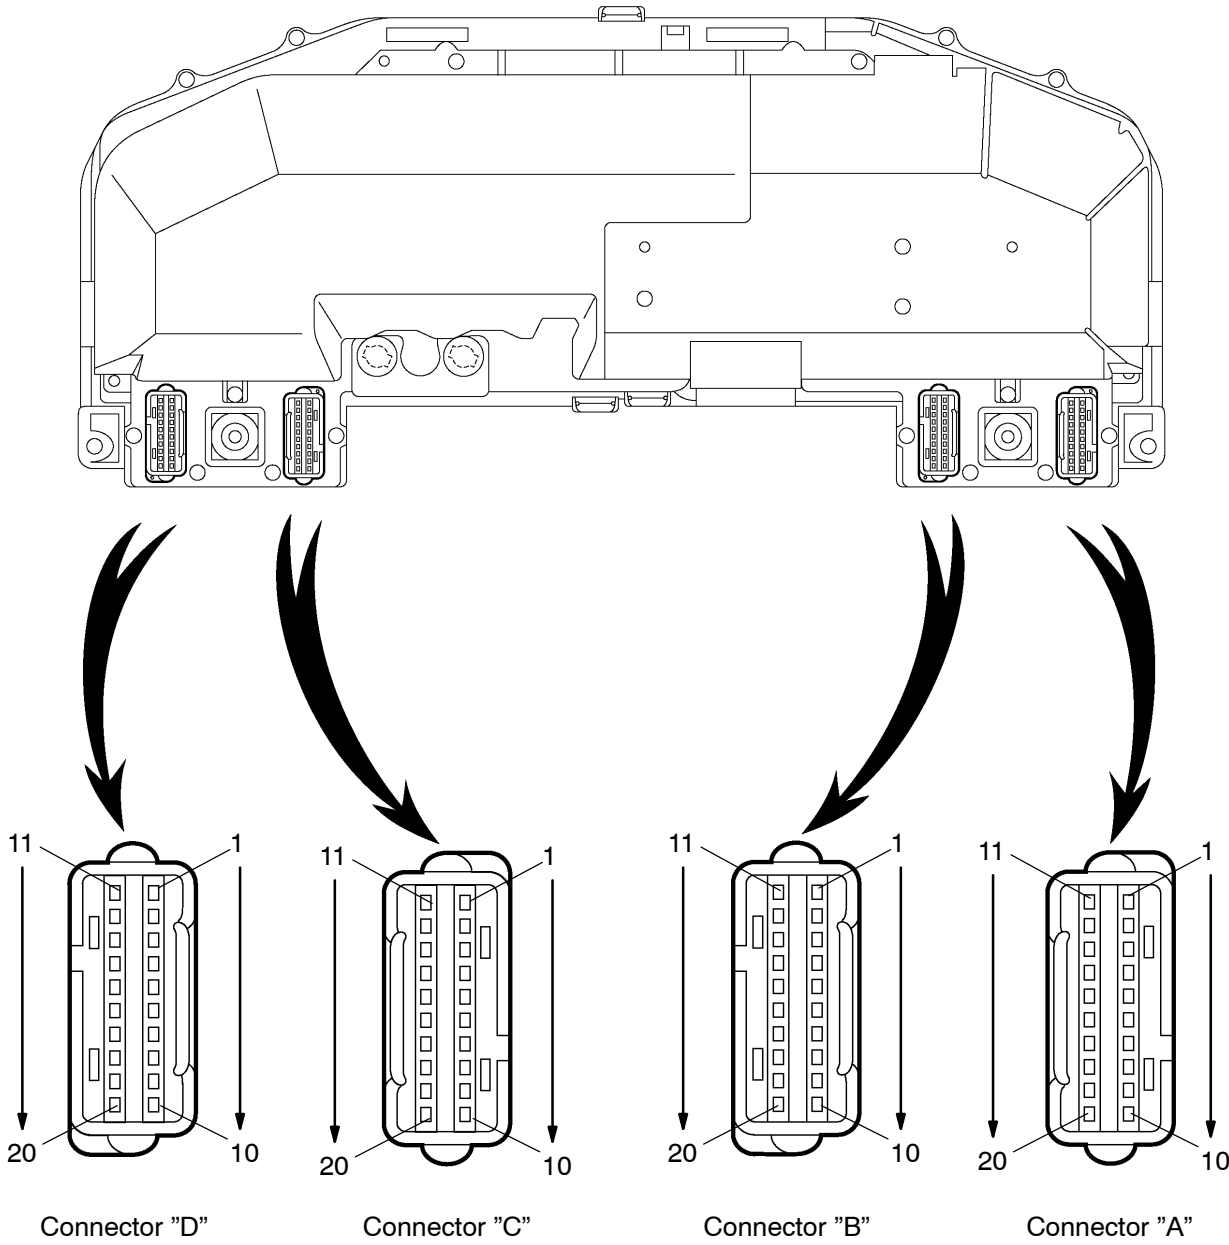

- (S): Speedometer
 (T): Tachometer
 (F): Fuel Receiver Gauge

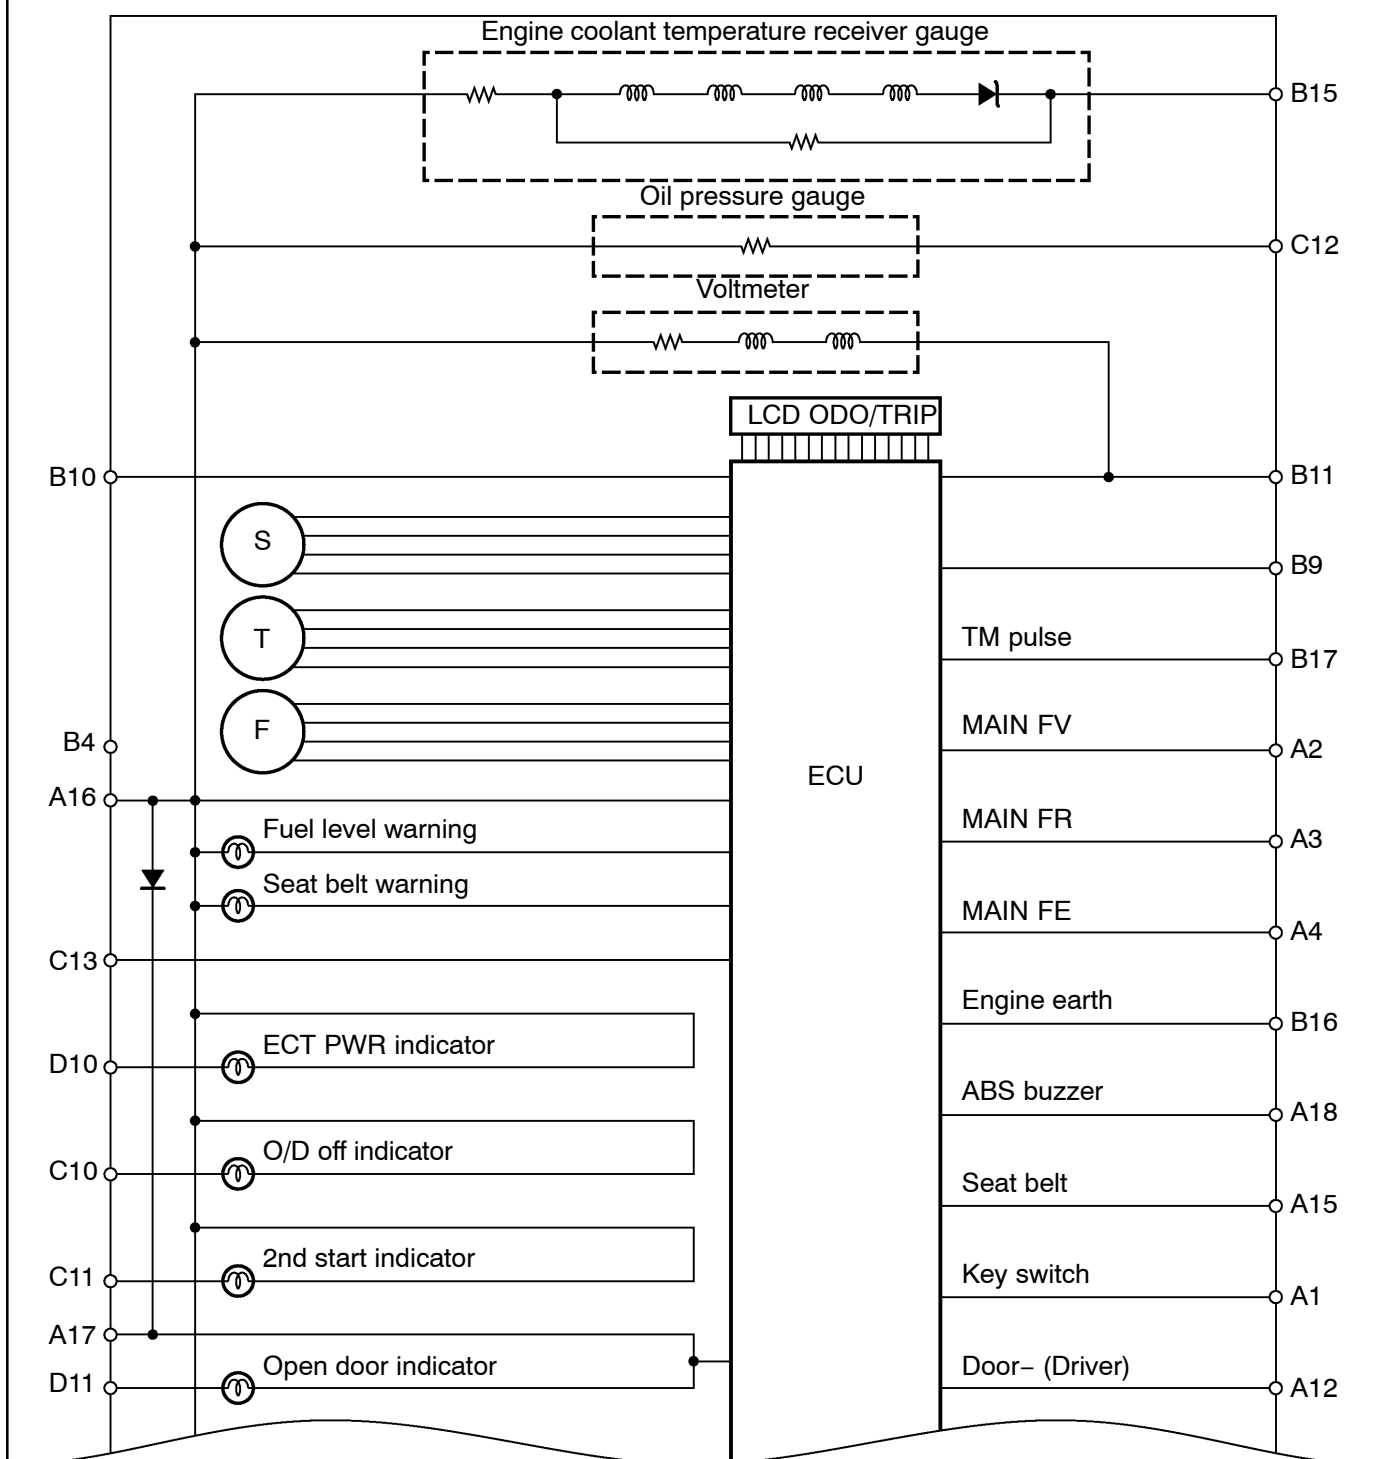

I06157

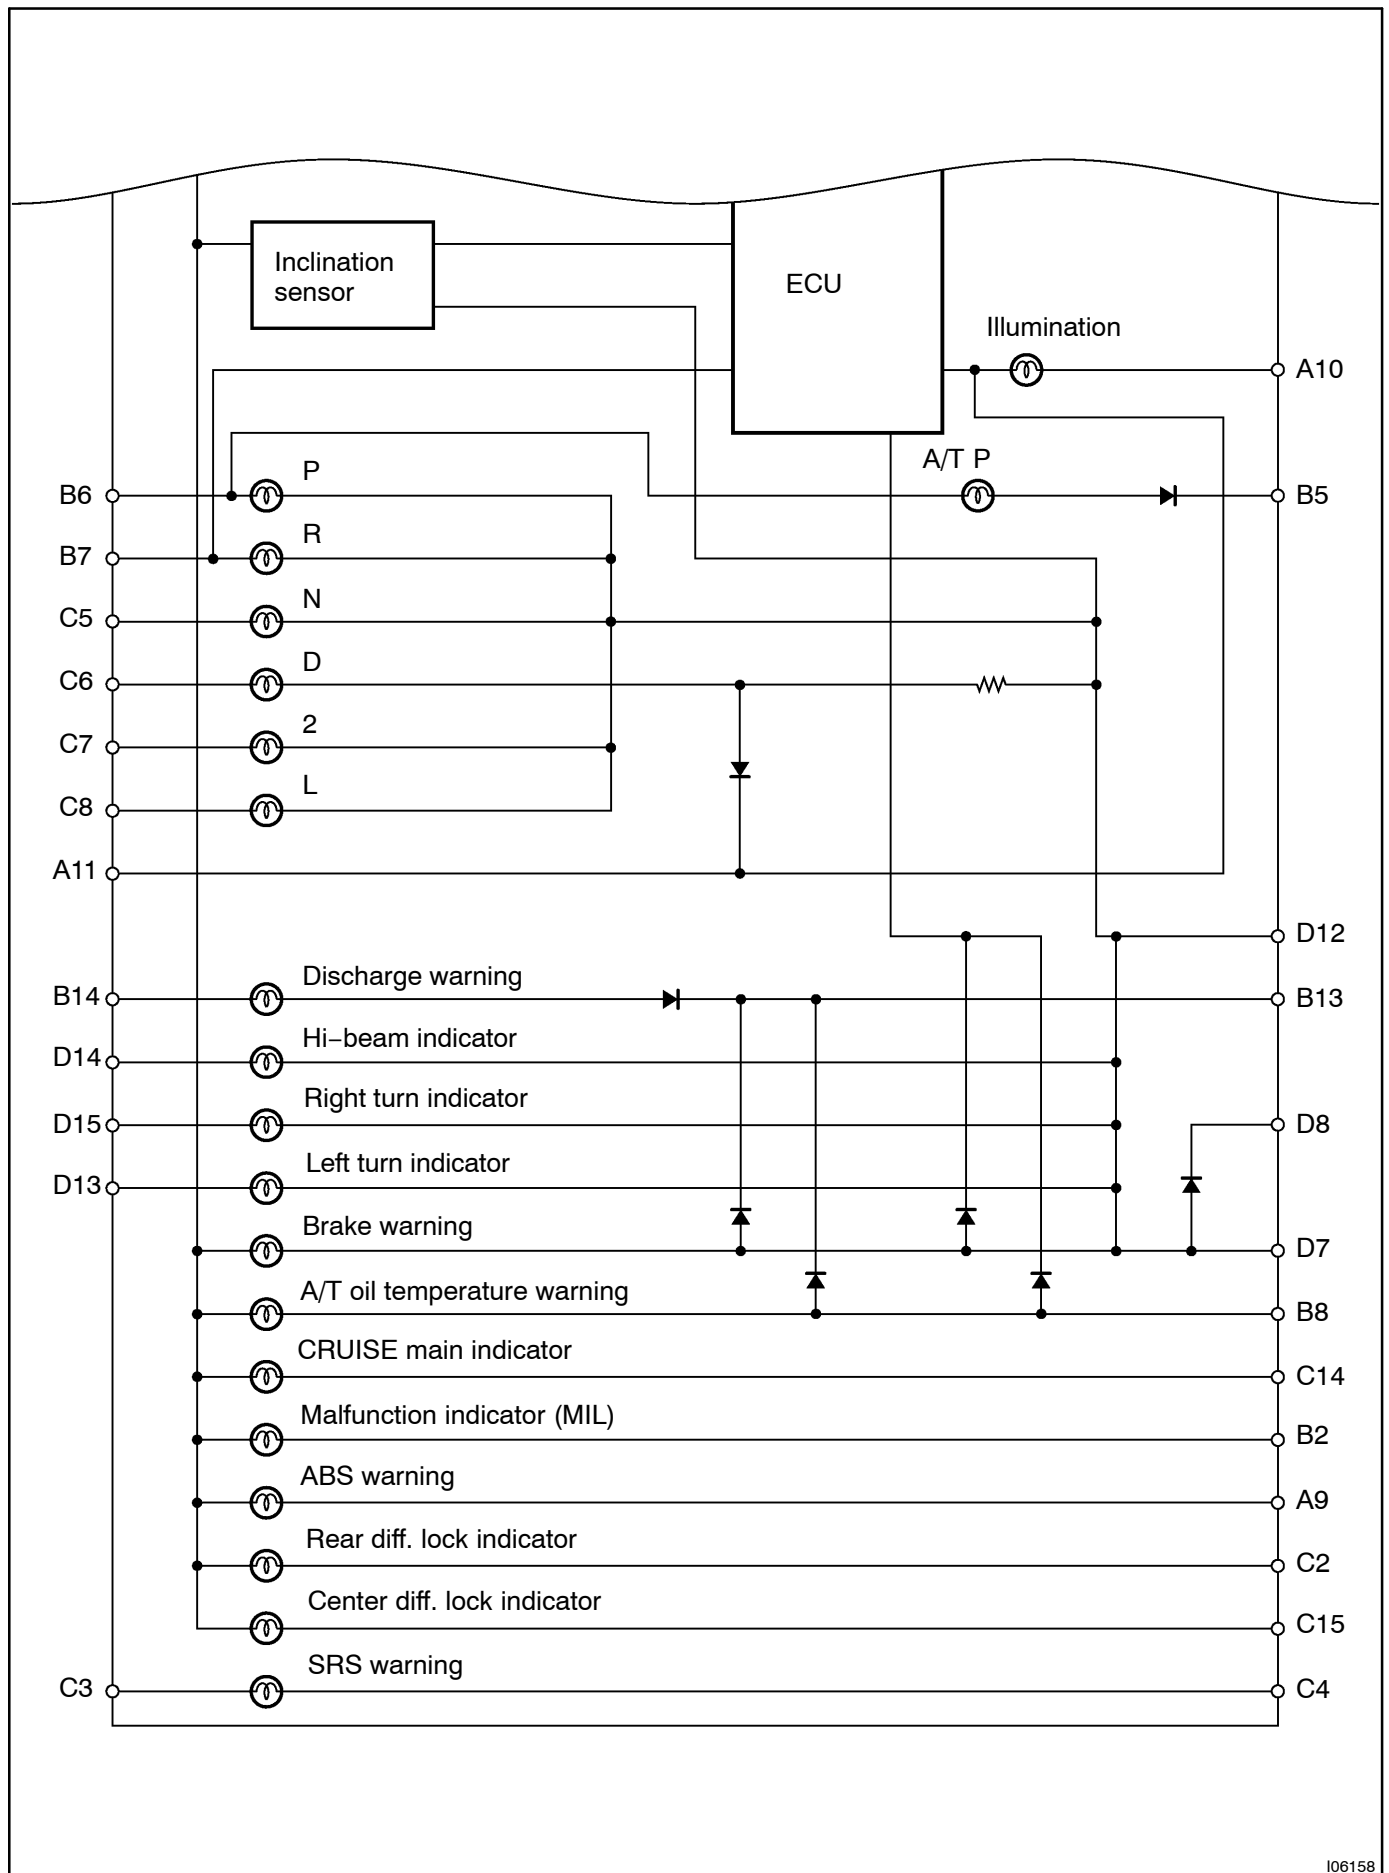

I06158

No.		Wiring connector side
A	1	Key Unlock Warning Switch
	2	Fuel Sender Gauge
	3	Fuel Sender Gauge
	4	Fuel Sender Gauge
	9	ABS ECU
	10	Light Control Rheostat
	11	TAIL Fuse
	12	Driver Door Courtesy Switch
	15	Seat Belt Buckle Switch
	16	GAUGE Fuse
	17	DOME Fuse
	18	ABS ECU
B	2	ECM
	4	MIRR Fuse
	5	Park/ Neutral Position Switch (P position)
	6	Park/ Neutral Position Switch (P position)
	7	Park/ Neutral Position Switch (R position)
	8	ECM
	9	Speed Control Unit
	10	Speed Sensor
	11	Ground
	12	Light control rheostat
	13	Generator
	14	IGN Fuse
	15	Engine Coolant Temperature Sender Gauge
	16	Ground
	17	ECM
C	2	Rear Diff. Lock Detection Switch
	3	ECU-B Fuse
	4	Center Airbag Sensor Assembly
	5	Park/ Neutral Position Switch (N position)
	6	Park/ Neutral Position Switch (2 position)
	7	Park/ Neutral Position Switch (D position)
	8	Park/ Neutral Position Switch (L position)
	10	O/D Main Switch
	11	ECM
	12	Low Oil Pressure Warning Switch
	13	Starter Relay
	14	ECM
	15	Transfer 4WD Position Detection Switch
D	7	Rear Diff. Lock Detection Switch
	8	Parking Brake Switch
	10	ECT Pattern Select Switch
	11	Body Control ECU (Instrument Panel ECU)
	12	Ground
	13	Turn Signal Switch (Left)
	14	Headlight Dimmer Switch
	15	Turn Signal Switch (Right)