



LOCATION

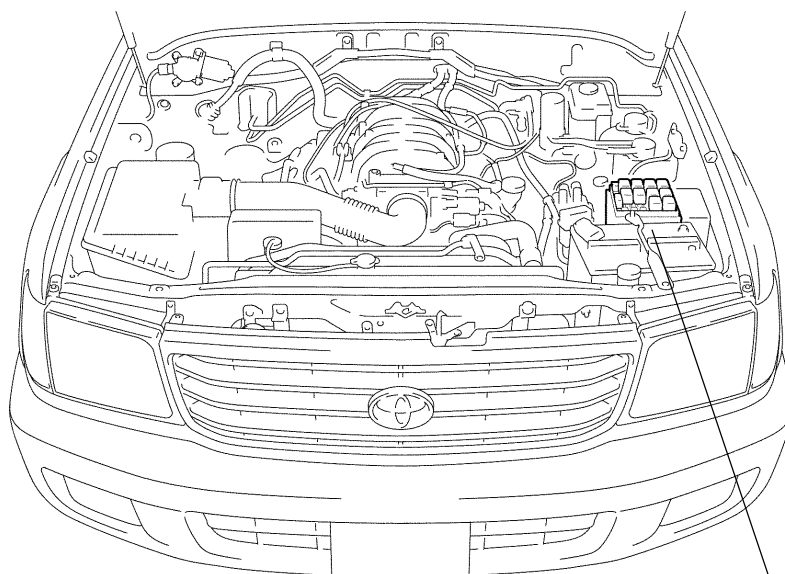

Engine Room Junction Block

- EFI Fuse
- EFI and ECD Relay

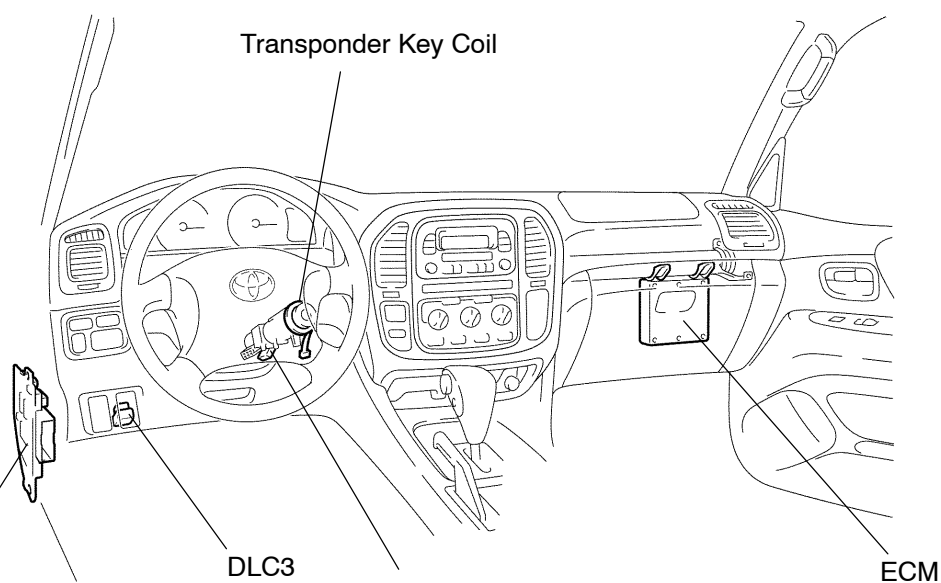

Driver Side Junction Block
● IGN Fuse

I06215