



DISASSEMBLY

1. REMOVE STEERING WHEEL(See page [SR-25](#))

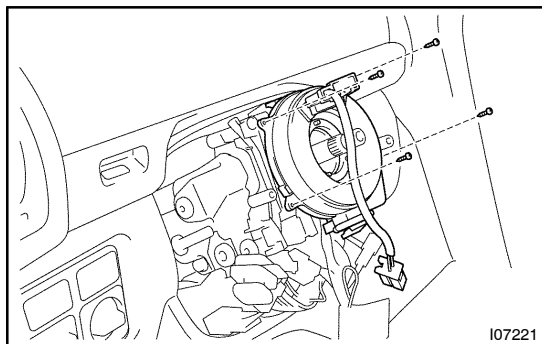

2. REMOVE SPIRAL CABLE

Remove the 4 screws and the spiral cable.

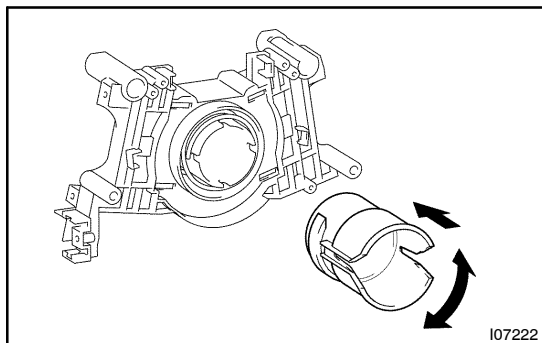

3. REMOVE CANCEL CAM

Turn the cancel cam with pressing it and pull it out.