


IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH LOCATION

BE01L-05

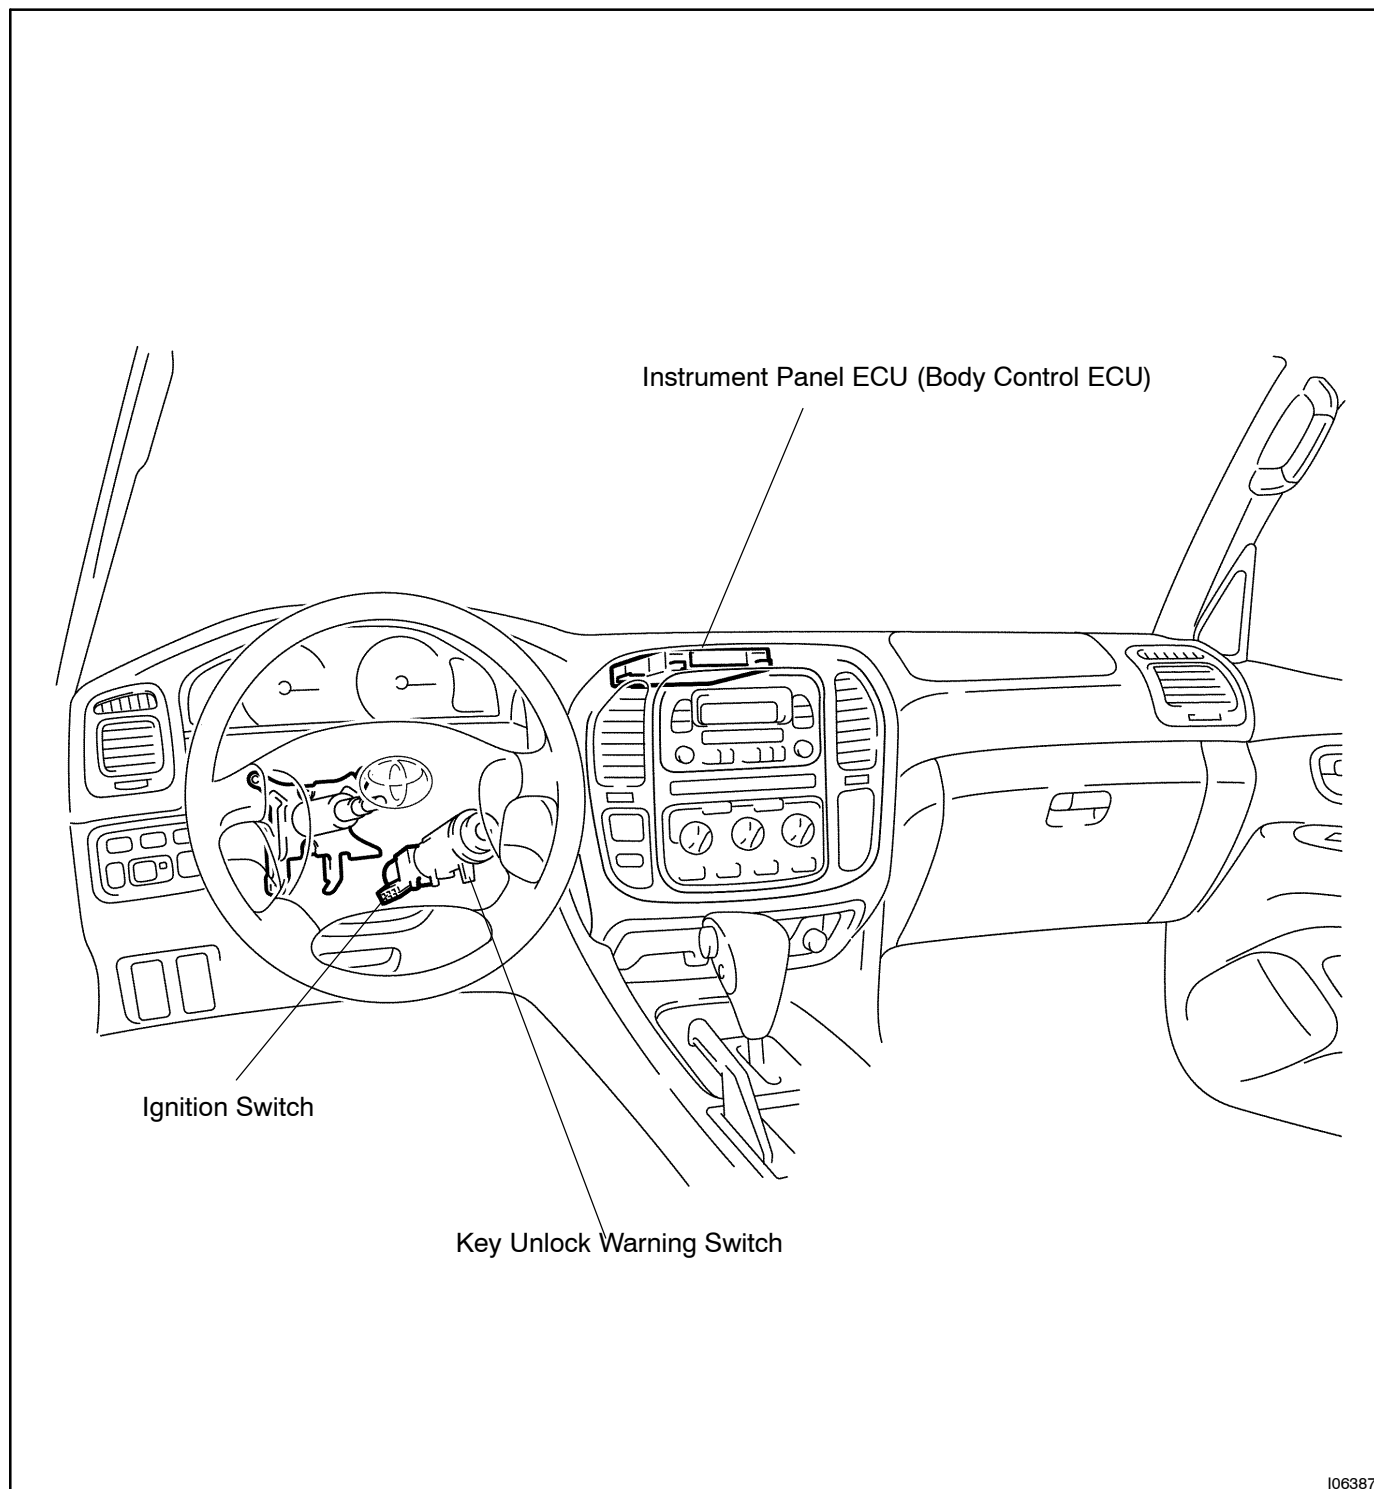

I06387