

REMOVAL

1. REMOVE SEAT TRACK OUTER COVER

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT SEAT

(a) Remove the 4 bolts.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

(b) Disconnect the connector, then remove the front seat.

NOTICE:

Be careful not to damage the body.